Manualslib.com - The Global Manuals Library

SHARP 21HT-15CS SERVICE MANUAL

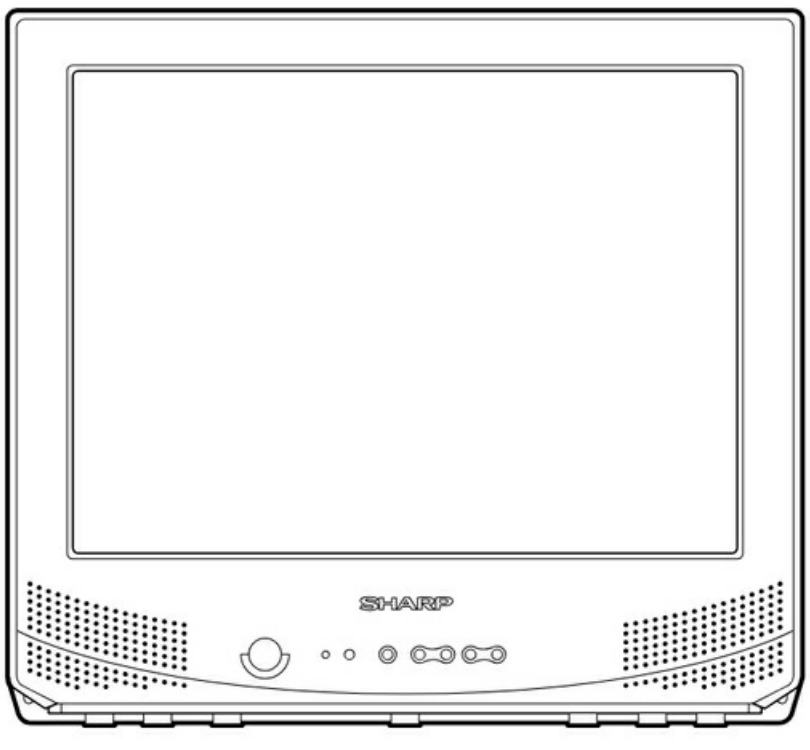

Quick Links

Service Adjustments
Schematic Diagrams

Table of Contents

Table of Contents
ELECTRICAL SPECIFICATIONS
IMPORTANT SERVICING NOTES
CONTROLS & TERMINALS
SERVICE ADJUSTMENTS
screen adjustment
HOTEL MODE FUNCTIONS
CHASSIS LAYOUTS
LED FLASHING CODE
PRINTED WIRING BOARDS
ICs ADDITIONAL INFORMATION
SCHEMATIC DIAGRAMS
BLOCK DIAGRAMS
TROUBLESHOOTING TABLES
PARTS LISTING
CRT ADAPTATION
SOURCE OF DOCUMENTATION
Other ManualsLib Projects

SHARP®

SERVICE MANUAL

SE0021HT1*C00
Issued: 14th Nov 2002

GA-1E CHASSIS

PAL SECAM B/G, D/K SYSTEM COLOUR TELEVISION

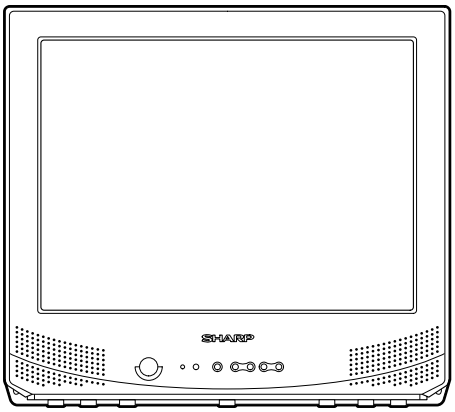

MODELS

21HT-15Cs
21HT-16Cs

In the interests of user safety (required by safety regulations in some countries) the set should restored to its original condition and only parts identical to those specified should be used.

CONTENTS

ELECTRICAL SPECIFICATIONS 3
IMPORTANT SERVICING NOTES 4
CONTROLS & TERMINALS 5
SERVICE ADJUSTMENTS 6
HOTEL MODE FUNCTIONS 12
CHASSIS LAYOUTS 14
LED FLASHING CODE 15
PRINTED WIRING BOARDS 15
ICs ADDITIONAL INFORMATION 20
SCHEMATIC DIAGRAMS 26
BLOCK DIAGRAMS 32
TROUBLESHOOTING TABLES 35
PARTS LISTING 38
CRT ADAPTATION 42
SOURCE OF DOCUMENTATION 43

SHARP CORPORATION

This document has been published to be used for after sales service only.

Service Manual update log sheet

Technical Report No. Technical Bulletin No.	Cause / Solution	Part No.	Page No.	Application Data /Serial No.

Use this page to keep any special servicing information as Technical Report (Bulletin), Technical Information, etc.
If only part number changes are required, just change part number directly the part number in the Parts Listing Section.
If you need more information, please refer to the Technical Report (Bulletin).

ELECTRICAL SPECIFICATIONS

•Power Input ..... 220V-240 Volts AC 50Hz

•Power Consumption
Normal Operation (Method IEC60107) 43W
Stand-by Operation 3W

•Audio Power Output Rating ..... 4W x 1 (MPO)

•Speaker ..... 16Ω 4W, 9 x 5 cm, 1pc

•Convergence ..... Self Converging System

•Focus ..... Bi-Potential Electrostatic

•Sweep Deflection ..... Magnetic

•Picture Intermediate Frequency
B/G 38.9MHz
D/K 38.9MHz

•Sound Carrier Trap
B/G 33.4MHz
D/K 32.4MHz

•Adjacent Sound Carrier Trap
B/G 40.4MHz
D/K 40.4MHz

•Adjacent Picture Carrier Trap
B/G 31.9MHz
D/K 30.9MHz

•Aerial Input Impedance
VHF/UHF ..... 75 ohm Unbalanced

•Tuning Ranges ..... 48.25MHz thru 855.25 MHz
VHF CH02-CH12, R01-R12
S1-S41 (HYPERBAND)
UHF ..... CH21 - CH69

•White Level

Set the brightness control, with no signal connected, so that the CRT cathode current is 600μA. The maximum correction applied to each cathode current to achieve a screen temperature of 7250 degrees K-11 MPCD should not exceed 15% of its original value.

X	Y	Screen temperature
0.304 ± 0.015	0.306 ± 0.015	7250° K-11 MPCD

Specifications are subject to change without prior notice.

MODEL DIFFERENCES AND DESTINATION (Operation Manual languages)

21HT15C: English, Polish, Russian, Czech, Slovak, Hungarian, Romanian.
21HT15CS: **Silver Cab.** English, Polish, Russian, Czech, Slovak, Hungarian, Romanian.
21HT16C: **Cyrillic European TXT**. English, Polish, Russian, Czech, Slovak, Hungarian, Romanian.
21HT16CS: **Cyrillic European TXT, Silver Cab.** English, Polish, Russian, Czech, Slovak, Hungarian, Romanian.

WARNING

The chassis in this receiver is partially hot. Use an isolation transformer between the line cord plug and power receptacle, when servicing this chassis.
To prevent electric shock, do not remove cover. No user-serviceable parts inside. Refer servicing to qualified service personnel.

IMPORTANT SERVICING NOTES

Only qualified service personnel are allowed to carry out maintenance and repair of this receiver.

Servicing of high voltage system and CRT

It is important that the static charge is removed from the high voltage system when carrying out work on the receiver. This can be achieved by connecting a 10K resistor (with a suitably insulated lead) from the CRT cavity connector to the CRT ground tag. This must be carried out with the AC supply disconnected from the receiver. Note the following:

- The CRT in this receiver employs Integral Implosion Protection.
- If the CRT has to be changed it MUST be replaced with the correct type for continued safe working
- DO NOT lift the CRT by its neck.
- When handing the CRT, ensure that shatterproof goggles are worn.
- Ensure that the CRT is discharge before handling.

X-Ray

This receiver is designed to keep any x-ray emission to an absolute minimum. Some fault conditions and servicing procedures may produce potentially hazardous x-ray radiation levels. This is a problem when in close proximity to the receiver for long periods of time. To reduce any risks associated with this, please observe the following precautions:

1. When undertaking any servicing on this chassis, DO NOT increase the EHT to more than 30.5 KV, (at a instantaneous beam current of 1300μA).
2. Ensure that during normal operation the EHT does not exceed 25.0 KV±1.5KV (at a beam current of 1100μA). This level has been preset in the factory. Always check that this level has not been exceeded after carrying out any repair on the receiver.
3. DO NOT replace the CRT with any other type than that specified in the parts listing as this may cause excessive x-ray radiation.

Before returning the receiver to the customer

In addition to the above checks, the following should also be carried out before returning the receiver to the customer.

1. Inspect all the leads to ensure that they are dressed correctly and that they are not obstructed or pinched by any other parts.
2. Ensure that all protective devices are in good condition. These will include nonmetallic control knobs, insulating fish papers, cabinets backs, compartment covers or shields, mechanical insulators, etc.

CONTROLS & TERMINALS

Remote Control

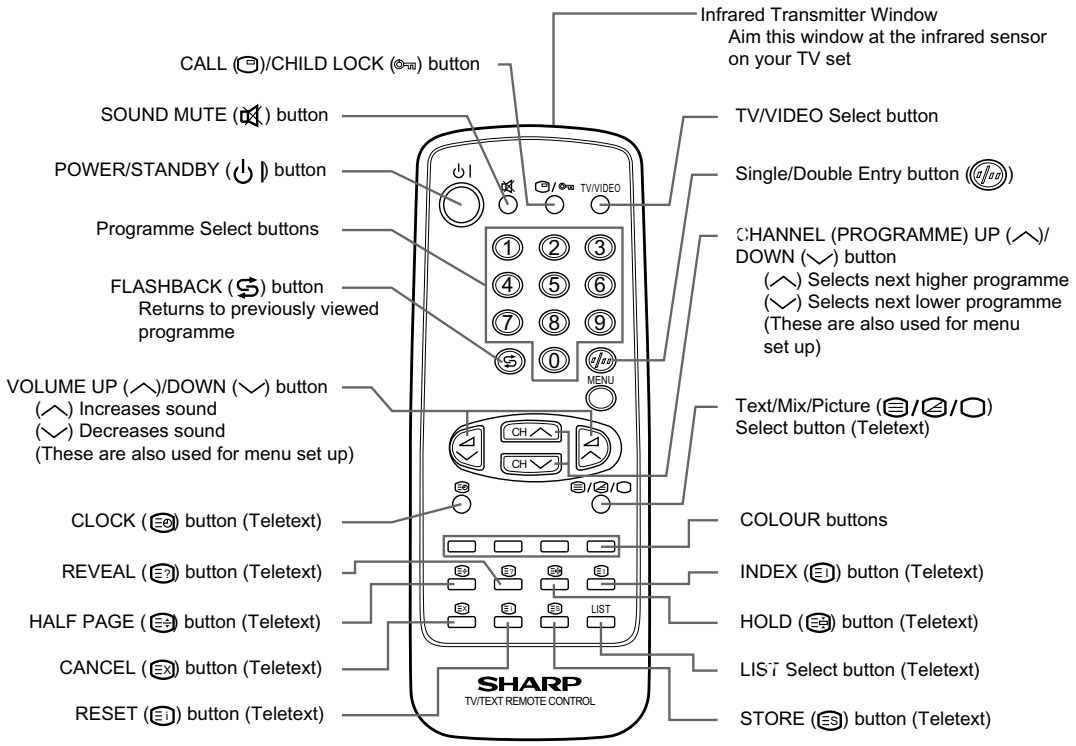
Infrared Transmitter Window
Aim this window at the infrared sensor on your TV set
CALL ( )/CHILD LOCK ( ) button
SOUND MUTE ( ) button
POWER/STANDBY ( ) button
Programme Select buttons
FLASHBACK ( ) button
Returns to previously viewed programme
VOLUME UP ( )/DOWN ( ) button
( ) Increases sound
( ) Decreases sound
(These are also used for menu set up)
CLOCK ( ) button (Teletext)
REVEAL ( ) button (Teletext)
HALF PAGE ( ) button (Teletext)
CANCEL ( ) button (Teletext)
RESET ( ) button (Teletext)
TV/VIDEO Select button
Single/Double Entry button ( )
CHANNEL (PROGRAMME) UP ( )/ DOWN ( ) button
( ) Selects next higher programme
( ) Selects next lower programme
(These are also used for menu set up)
Text/Mix/Picture (/ /) Select button (Teletext)
COLOUR buttons
INDEX ( ) button (Teletext)
HOLD ( ) button (Teletext)
LIST Select button (Teletext)
STORE ( ) button (Teletext)
TV/VIDEO
MENU
CH
LIST
SHARP
TV/TEXT REMOTE CONTROL

TV Front

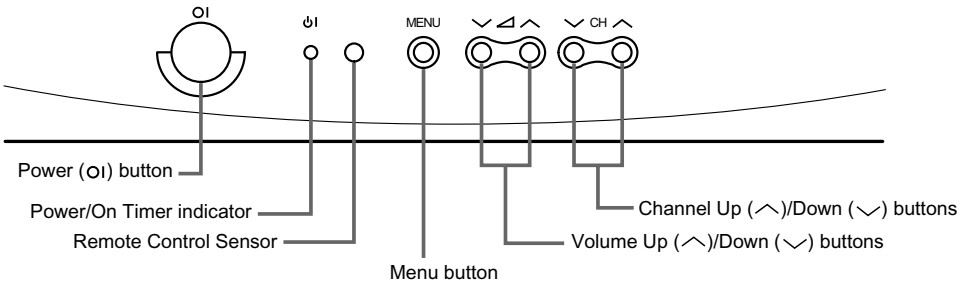

Euro-SCART 21-Pin Terminal

For greater A/V enjoyment, various audio and video devices may be connected via the Euro-SCART 21-Pin Terminal.

21-Pin Euro-SCART

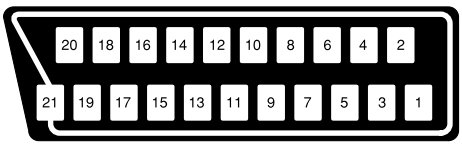

1. Audio right output
2. Audio right input
3. Audio left output
4. Common earth for audio
5. Earth for blue
6. Audio left input
7. Blue input
8. Audio-video control
9. Earth for green
10. Not used
11. Green input
12. Not used
13. Earth for red
14. Not used
15. Red input
16. Red/Green/Blue control
17. Earth for video
18. Earth for video
19. Video output
20. Video input
21. Plug shield

SERVICE ADJUSTMENTS

• Service Mode function

All required adjustments for servicing this TV set, may be done in “service mode”, excepting G2 and FOCUS.

How to access the Service Mode

1. Turn the receiver on and ensure that it is tuned into a test pattern.
2. Turn the receiver off using the mains switch.
3. Press the volume down and channel up buttons together. See Fig.1.
4. Continue pressing the volume down and channel up buttons while turning the mains on using the mains switch. See Fig.1.
5. Keep pressing the volume down and channel up buttons until the picture appears.
6. When <<SHARPX X VXX.XX>> appears on the screen, release the two buttons.
7. The receiver is now in the service mode.

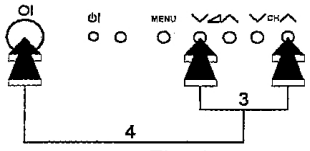

Fig. 1

To move between the various service mode functions, use the channel up and down buttons.

Use the volume buttons to change the data to the desired value.

The data will be stored automatically when exiting the service mode. To exit the service mode press the stand-by button on the remote control or turn the receiver off with the mains switch.

Fig. 2

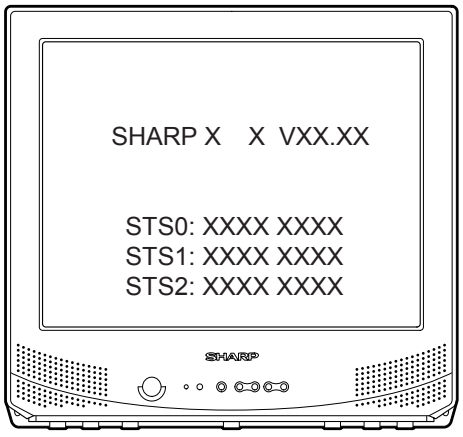

Fig. 3

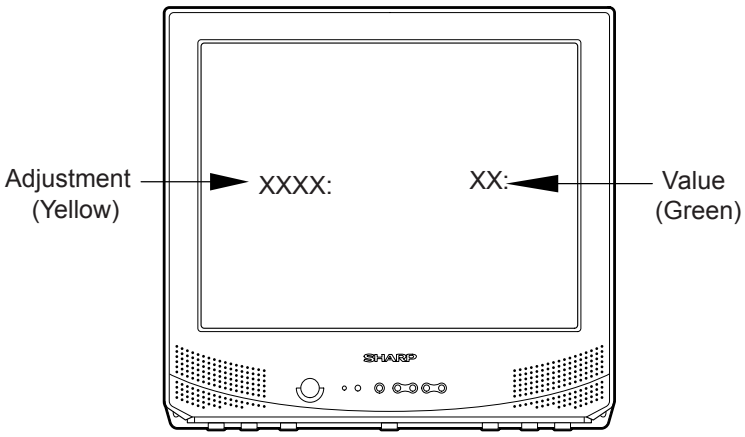

• Service adjustment and data list

The table below shows the various service mode positions, range of values and default value. The columns are headed as below.

Heading: Descriptions:

OSD This is what will appear on the screen at this position.

Function This is the description of the mode's function.

Range This is the range of values that can be entered while in this mode.

Initial This is the initial value, i.e. just after changing the NVM. Shadowed values are those to be modified in Default.

Default This is the recommended default value for this mode.

FIX/ADJ If this is ADJ, then it may be necessary to adjust this value away from the default.

No.	OSD	Function	Range	Initial	Default	FIX/ADJ
1	AGC	AGC Take Over Point	0...63	14	34	ADJ
2	V-LIN	Vertical Slope [VS]	0...63	32	33	ADJ
3	V-AMP	Vertical Amplitude [VA]	0...63	32	18	ADJ
4	V-CENT	Vertical Shift [VSH]	0...63	32	17	ADJ
5	H-CENT	Horizontal shift [HS]	0...63	32	34	ADJ
6	H-CENT60	offset to H-CENT for60 Hz	0...31 data(-16..+15)	16	20	FIX
7	EW / /	Horizontal Parallelogram [HP]	0...63	32	32	FIX
8	HB	Horizontal Bow	0...63	32	32	FIX
9	S-COR	S-Correction [SC]	0...63	0	22	FIX
10	DRI-RS	White point Red Standard white temp.	0...63	32	42	ADJ
11	DRI-GS	White point Green Standard white temp.	0...63	32	42	ADJ
12	DRI-BS	White point Blue Standard white temp	0...63	32	42	ADJ
13	DRI-RW	White point Red Warm white temp.	0...32	16	16	FIX
14	DRI-GW	White point Green Warm white temp.	0...32	16	9	FIX
15	DRI-BW	White point Blue Warm white temp.	0...32	16	9	FIX
16	DRI-RC	White point Red Cold white temp.	0...32	16	9	FIX
17	DRI-GC	White point Green Cold white temp.	0...32	16	9	FIX
18	DRI-BC	White point Blue Cold white temp.	0...32	16	16	FIX
19	SUB-VOL	Max Volume	0...63	60	60	FIX
20	SUB-CON	Sub Contrast	0...63	63	63	FIX
21	SUB-COL	Sub Colour	0...63	32	25	FIX
22	SUB-BRI	Sub Brightness	0...63	32	34	FIX
23	TINT	Sub Tint	0...63	32	32	FIX
24	SUB-SHP	Sub Sharpness	0...63	32	11	FIX
25	HTL-VOL	Max Hotel Volume	0...63	30	30	FIX

No.	OSD	Function	Range	Initial	Default	FIX/ADJ
26	HTL-PRG	Hotel Program number	0...99 or > 99 for none	255	255	FIX
27	RGB	OSD RGB Reference	0...15	15	0	FIX
28	SEARCH-SYS	Sound system for auto turning	0(L-BG),1(BG),2(I),3(DK)	1	3	FIX
29	CUT-R	Black Level off-set R [BLR]	0...63	0	0	FIX
30	CUT-G	Black Level off-set G (BLG)	0...63	0	10	FIX
31	CDL	Cathode Drive Level [CL]	0...15	0	5	FIX
32	DL-PT	Y-Delay time for PAL (TV) [YD]	0...15	12	4	FIX
33	DL-ST	Y-Delay time for SECAM (TV) [YD]	0...15	15	8	FIX
34	DL-4T	Y-Delay time for N443 (TV) [YD]	0...15	12	8	FIX
35	COL-OP	COLOUR OFFSET (PAL)	0...15	8	8	FIX
36	COL-OS	COLOUR OFFSET (SECAM)	0...15	8	8	FIX
37	COL-O4	COLOUR OFFSET (NTSC443)	0...15	4	4	FIX
38	SHP-OP	SHARPNESS OFFSET(PAL)	0...15	8	8	FIX
39	SHP-OS	SHARPNESS OFFSET(SECAM)	0...15	4	4	FIX
40	SHP-O4	SHARPNESS OFFSET(NTSC443)	0...15	8	8	FIX
41	SC-VOL	SCART volume	0..255	115	115	FIX
42	PRE-SC	Prescaler SCART input	0..127	25	25	FIX
43	PRE-FM	Prescaler FM/AM	0..127	72	72	FIX
44	PRE-NICAM	Prescaler SCART input	0..127	0	0	FIX
45	AVC-DKY	AVC Decay	1...4 data(1.2.4.8.)	2	2	FIX
46	AC-OFF-TIM	Time to set the AC-OFF timer is in steps of 10minutes	0..15	0	0	FIX
47	DISP	Language or symbols	0(symboles), 1(English), 2(French)	0	0	FIX
48	TXT-EUR	Teletext pan-European language	0 (teletext pan-european language) 1 (second language;cyrillic) 2(third language;Greek)	0 0	0 (...15C) 1 (...16C)	FIX
49	BKS	Black Stretch	0 (disable) or 1 (enable)	1	1	FIX
50	AVC	Automatic Volume Control(AVL)	0 (disable) or 1 (enable)	0	1	FIX
51	FFI	Fast Filter IF-PLL	0 (disable) or 1 (enable)	0	0	FIX
52	ACL	Auto Colour Limit	0 (disable) or 1 (enable)	0	1	FIX
53	S-L	Sound system L	0 (disable) or 1 (enable)	0	0	FIX
54	S-DK	Sound system DK	0 (disable) or 1 (enable)	1	1	FIX
55	S-I	Sound system I	0 (disable) or 1 (enable)	1	0	FIX
56	S-BG	Sound system BG	0 (disable) or 1 (enable)	1	1	FIX
57	BLUE-BACK	Video mute at Ident loss	0 (disable) or 1 (enable)	1	1	FIX
58	VMC	Video Mute at program/source Change	0 (disable) or 1 (enable)	1	1	FIX
59	HTL	Hotel mode	0 (disable) or 1 (enable)	0	0	FIX
60	BTSC	Reduced FM demodulator Gain (for BTSC sig)	0 (disable) or 1 (enable)	0	0	FIX
61	AV	Number of external AV sources	0 for 1 AV or 1 for 2 AV	1	0	FIX
62	FMWS	FM Window Selection	0 (disable) or 1 (enable)	0	0	FIX
63	SM0	Sound Mute bit 0	0 (disable) or 1 (enable)	1	1	FIX
64	SM1	Sound Mute bit 1	0 (disable) or 1 (enable)	0	0	FIX
65	AGC0	IF AGC speed bit0	0 (disable) or 1 (enable)	1	1	FIX
66	AGC1	IF AGC speed bit1	0 (disable) or 1 (enable)	0	0	FIX
67	FOA-FE	Phi 1 time constant for FE(RF)	0 (disable) or 1 (enable)	0	0	FIX
68	FOB-FE	Phi 2 time constant for FE(RF)	0 (disable) or 1 (enable)	0	0	FIX
69	FOA-AV	Phi 1 time constant for AV	0 (disable) or 1 (enable)	1	1	FIX
70	FOB-AV	Phi 2 time constant for AV	0 (disable) or 1 (enable)	1	1	FIX
71	TXT	Teletext	0 (disable) or 1 (enable)	0	1	FIX
72	TXT-W/E	Teletext Western or Eastern characters	0 (westem) or 1 (eastem)	0	1	FIX
73	FSL	Forced V-SYNC slicing level	0 (disable) or 1 (enable)	0	0	FIX
74	HP2	Sync of OSD	0 for Ph1 or 1 for Ph2	0	0	FIX
75	CP	Charge pump	0 (fast tuning) or 1 (moderate speed tuning)	0	0	FIX
76	NICAM	NICAM decoding enabled	0 (disable) or 1 (enable)	0	0	FIX
77	IGR	IGR decoding enabled	0 (disable) or 1 (enable)	0	0	FIX
78	AUTO	Start auto tuning at POWER-ON	0 (disable) or 1 (enable)	0	0	FIX
79	TXT-TGL	Function of TXT key	0 or 1	0	1	FIX
80	EVG	Enable Vertical Guard	0 (disable) or 1 (enable)	1	1	FIX

• Screen adjustment

1. G2 Adjustment

1. Enter the service mode (see page 6).
2. Use the channel up or channel down buttons to enter the << BLUE-BACK >> function.
3. Set this to << BLUE-BACK: 0 >>, i.e. blue background is turned off.
4. Turn the set off at the mains.
5. Turn the set back on.
6. Set the picture control settings to normal.
7. Select the SCART input by pressing the TV/SCART button on the remote control. Do not connect an input to the SCART socket. A blank raster will appear.
8. Connect an oscilloscope to TP851 on the CRT PWB. The waveform as in figure 4 should be displayed.
9. Adjust the G2 control (screen voltage) so that the peak of this waveform is 3.0V +/-0.1V above the zero volt line.
10. Enter the service mode.
11. Turn the blue background function back on again - set << BLUE-BACK: 1 >>.
12. Turn off the receiver using the mains button.
13. The G2 adjustment is now complete.

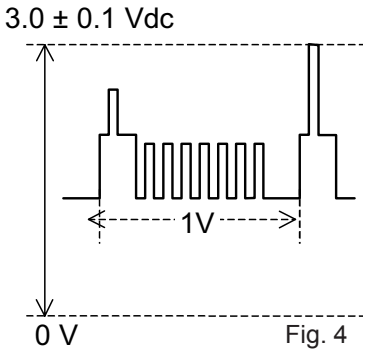

Fig. 4

2. Focus Adjustment

1. Receive a monoscope pattern signal at a level of 60 to 80 dBµV.
2. Set the picture settings to normal.
3. Adjust the focus potentiometer to obtain maximum definition.

• AGC Adjustment

1. Tune the receiver into a colour bar signal on channel E-12.

2. Set the RF generator to an output signal strength of 59 dB/µV (+/-1dBµV) –75 Ohms.

3. Connect an oscilloscope to TP201. TP201 is one end of R201.

4. Enter the service mode (see page 6).

5. Use the channel up and channel down buttons to enter the AGC mode.

6. By using the volume up and the volume down buttons, adjust the AGC until the voltage on TP201 drops by 0.1V to 0.3V below its maximum value.

7. Change the input signal strength to 66-70dBµV and make sure that there is no noise apparent in the picture.

8. Turn the receiver off at the mains, this will exit the service mode and store the adjustment.

• Geometry adjustment procedure

To adjust the geometry, follow the procedure outlined below:

1. Tune the set into a Philips test pattern.
2. Enter the service mode as described on page 6.
3. Use the channel up or channel down buttons to enter the desired mode
4. Use the volume buttons to achieve correct setting.
5. When adjustments are complete, use the stand-by button to turn off the set. The adjustment values will be stored at this point.

V-LIN
Adjust the vertical linearity control so that the picture centring is as shown in figure 5.

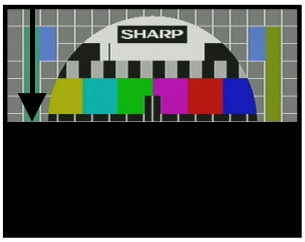

Fig. 5

V-AMP
Adjust the vertical amplitude control so that the picture overscans as shown in figure 6.

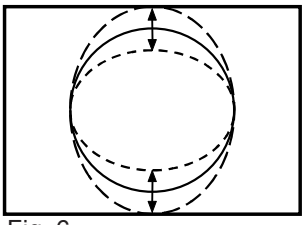
Fig. 6

V-CENT
Adjust the vertical centring control so that the picture is centred as shown in figure 7.

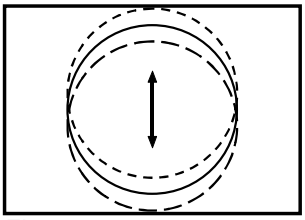
Fig. 7

H-CENT
Adjust the horizontal centring control so that the picture is centred as shown in figure 8.

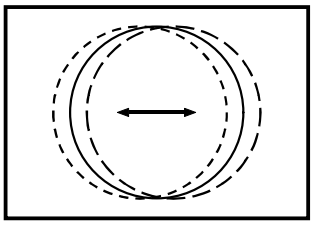
Fig. 8

• Colour adjustment procedure

The following adjustments should only be carried out when the CRT or IC801 are replaced.

Notes:

- This adjustment must be done after warming up the unit for 30 minutes or longer with a beam current over 700 µA.
- The red value «DRI-RS» should be fixed to 42. (Refer to “How to access service mode” section).
- «DRI-GS» adjustment alters “Y” coordinate.
- «DRI-BS» adjustment alters “X” and “Y” coordinates.

Adjustment method 1 (using the signal generator, varying the picture signal)

1. Adjust G2.
2. Input a white pattern with burst signal from SCART.
3. Position the colorimeter in the centre of screen.
4. Adjusting input signal level, select a luminance of 70 nits.
5. Operate again in “service mode“ and select «DRI-GS» and/or «DRI-BS» locations to obtain colour coordinates:

X	Y	Screen temperature
0.304 ± 0.015	0.306 ± 0.015	7250º K-11 MPCD

6. Reset the T V with the mains switch button to store the adjustment and exit service mode.
7. Check colour coordinates “X” and “Y” at 20 a 120 Nits. It may be necessary to repeat the same procedure to obtain the above values.

Adjustment method 2 (using the signal generator, with a fixed picture signal)

1. Adjust G2.
2. Tune a white pattern with burst signal.
3. Operate in “service mode”:
4. Using «SUB-CON», select a luminance of 70 nits.
5. Operate again in “service mode“ and select «DRI-GS» and/or «DRI-BS» locations to obtain colour coordinates:

X	Y	Screen temperature
0.304 ± 0.015	0.306 ± 0.015	7250º K-11 MPCD

6. Select «SUB-CON». Return data to “63”.
7. Reset the TV with the mains switch button to store the adjustment and exit service mode.
8. Check colour coordinates “X” and “Y” at 20 a 120 Nits. It may be necessary to repeat the same procedure to obtain the above values.

HOTEL MODE FUNCTIONS

The following procedure details how to set up the Hotel Mode Functions.

1. Short Description

1.1. Hotel Mode “HTL”: Main Hotel Mode. It deactivates “Channel Setting” functions. It reduces the Maximum Volume.

1.2. Hotel Mode “HTL-VOL”: Maximum Volume Level Regulation.

1.3 Hotel Mode “HTL-PRG”: Fixing start up program when the TV set is switched on.

2. Before start

2.1. It is necessary to program “Channel Setting” before setting up Hotel Mode “HTL” because after that Channel Setting are deactivated.

2.2. Consider that regarding TXT Features, after activate any of the Hotel modes in the “List Mode” will not be stored any page.

2.3. Consider that changed video control values are not stored.

3. Procedure

3.1. Hotel Mode “HTL” (Main Hotel Mode).

3.1.1. Previous Service Information: Initial Value: 0. Range: 0 to 1. Service Mode Indication: HTL.

3.1.2. Access the Service Mode (see this procedure on page 6).

3.1.3. Select “HTL” by using channel up/down buttons.

3.1.4. Change initial value from “0” (off) to “1” (on).

3.1.5. Notes:

3.1.5.1. The maximum volume level has been reduced from 60 to 30. For other value go to 3.2. Hotel Mode “HTL-VOL”

3.1.5.2. “Channel Setting” functions have been deactivated.

3.1.5.3. It is necessary to select Hotel Mode “HTL” to be able to set up Hotel Mode “HTL-VOL” or Hotel Mode “HTL-PRG”.

3.1.5.4. If you do not need to set up Hotel Mode “HTL-VOL” or “HTL-PRG” get out from Service Mode (To exit the Service Mode press the stand-by button on the remote control or turn the receiver off with the mains switch).

3.2. Hotel Mode “HTL-VOL” (Maximum Volume Level Regulation)

3.2.1. Previous Service Information: Initial value: 30. Range: 0 to 60. Service Mode indication: HTL-VOL.

3.2.2. To activate this Hotel Mode it is necessary activate previously Hotel Mode “HTL”. Then the maximum volume level changed fro 60 to 30 as initial value.

3.2.3. Select “HTL-VOL” by using channel up/down buttons.

3.2.4. Set the value according to your necessities by using volume up/down buttons.

3.2.5. Change initial value from “0” (off) to “1” (on).

3.2.6. Note: If you do not need to set up Hotel Mode “HTL-PRG” get out from Service Mode (To exit the Service Mode press the stand-by button on the remote control or turn the receiver off with the mains switch).

3.3. Hotel Mode “HTL-PRG” (Fixing start up program when the TV Set is switched on)

3.3.1. Initial value: 255. Range: 0 to 255. Service Mode indication: HTL-PRG.

3.3.2. To activate this Hotel Mode it is necessary activate previously Hotel Mode “HTL”.

3.3.4. Select “HTL-PRG” by using channel up/down buttons.

3.3.3. The initial value to 255, ensures that the TV Set starts up in the same program number that it was been displayed before turn it off.

3.3.4 If you want to fix other program number proceed as follows set the value according to your necessities by using volume up / down buttons. Use values between 0 to 99. In this way, the new program number appear fixed when you start up the TV set.

Example: If you would like to set starting program number “2”, change from 255 to 2.

3.3.5. Get out from Service Mode (To exit the Service Mode press the stand-by button on the remote control or turn the receiver off with the mains switch).

CHASSIS LAYOUTS

Mother unit

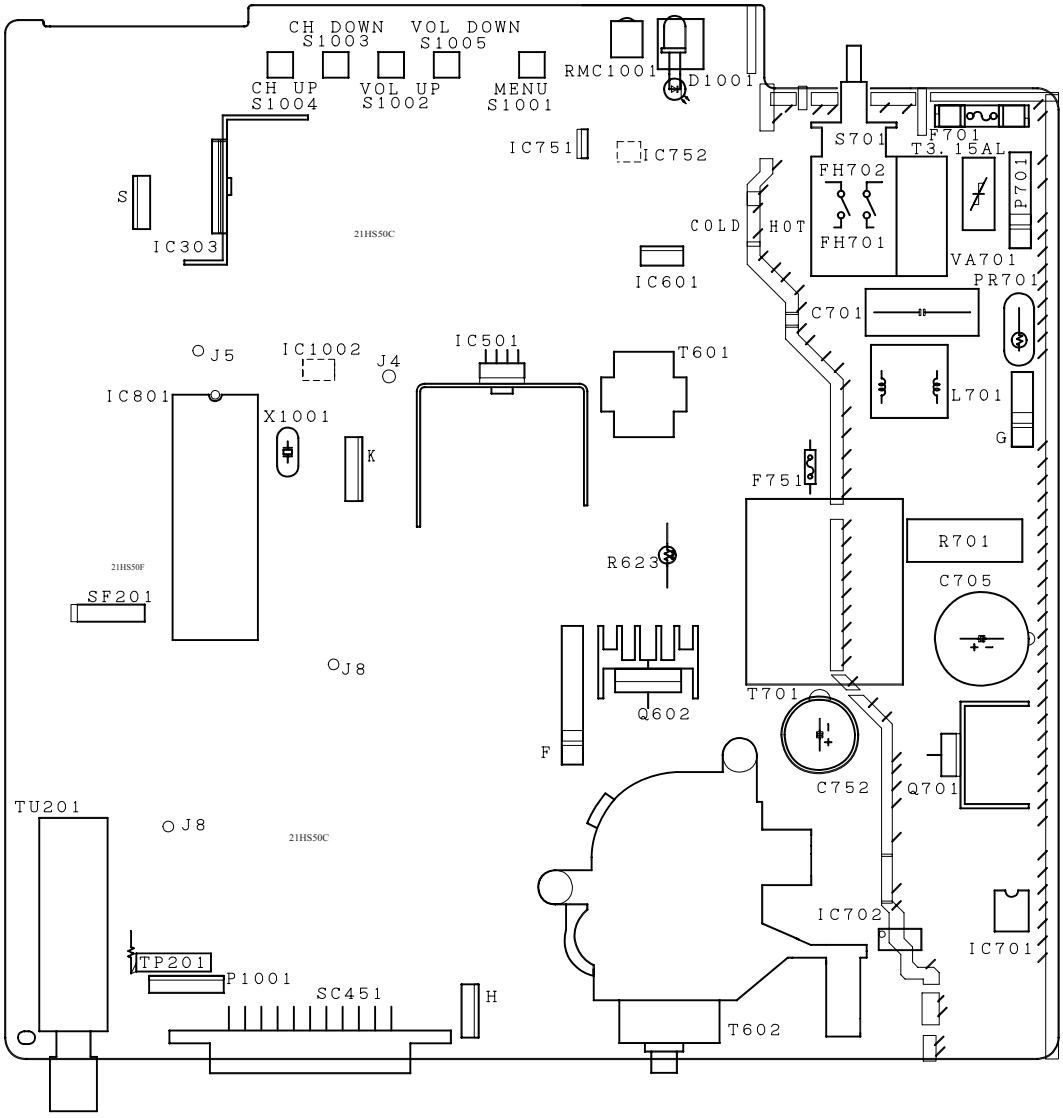

CRT unit

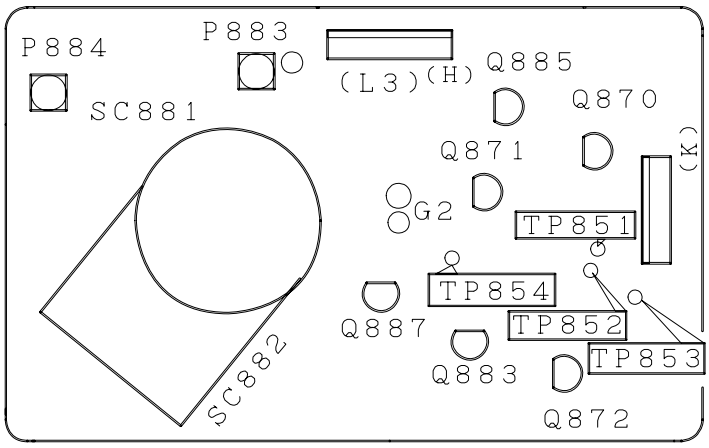

LED FLASHING CODE

PURPOSE: The led indicates the power mode, occurred I²C error and On timer

INPUT: Current power mode
- I²C Errors
- On timer

Processing:
- If in STANDBY mode and On timer inactive then switch LED off.
- If in STANDBY and On timer active set LED to blinking, (switch on and off at 1 Hz with a 50% duty cycle).
- If in POWER-ON mode, switch LED on.
- If an I²C error occurred, let the LED blink at 1 Hz, 50 % duty cycle. For the blinking times see the Table below.

Note: Only when an I²C error occurs for a number of times, or for a number of seconds, the I²C error is handled by the system (that is ,only then the set will go to standby, the led starts blinking).

IC/Module Name	Slave Address	Bus Error LED Blinking Time	Remarks	Ref. No.
M24C04, M24C08	A0,A2	2	512x8 EEPROM,1024x8 EEPROM	IC1002
TDA935x/6x/8x	8A	3	Address of internal TV processor	IC801
VTST6HD64 or CTF551	C0 C0	6 6	PLL Tuner	TU201

Table Error LED blinking times

PRINTED WIRING BOARDS

F 7341N0 PWB. Components side.

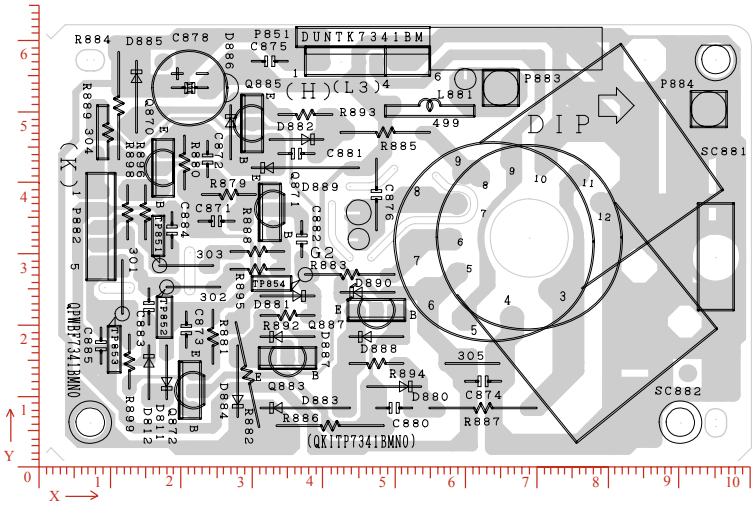

F 7340N7A PWB. Component side

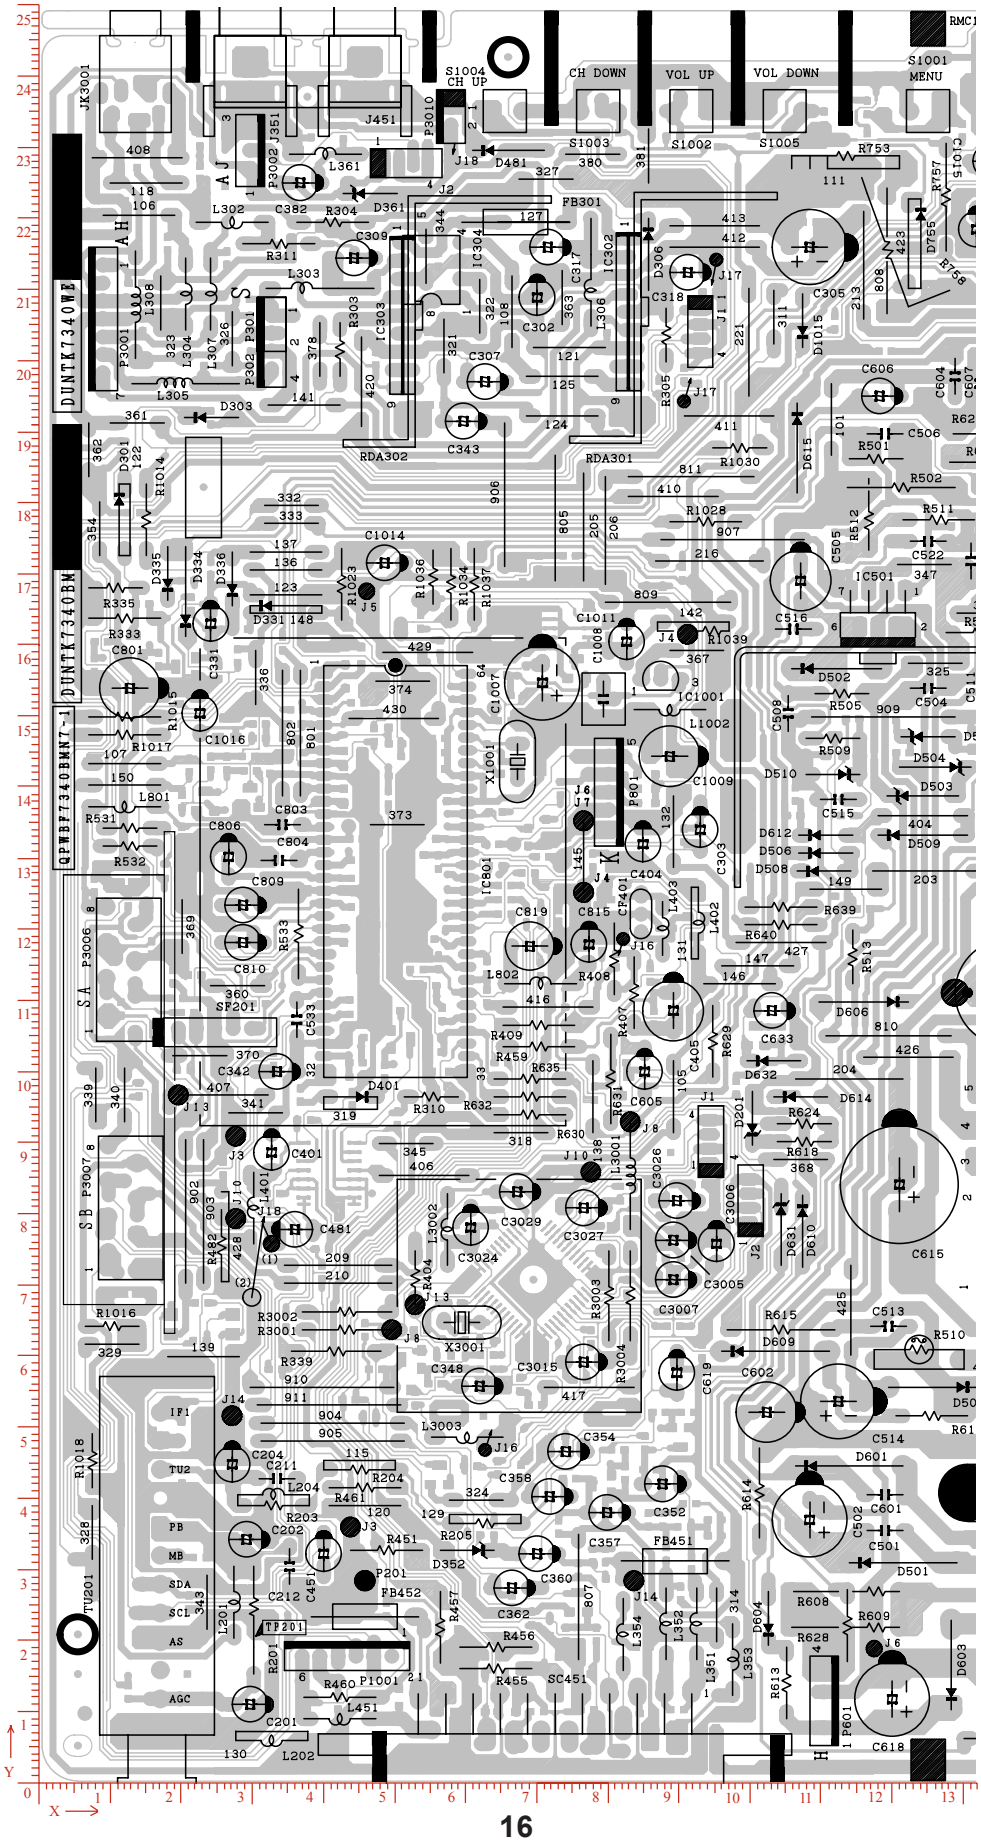

Page 17

F 7340N7A PWB. Component side

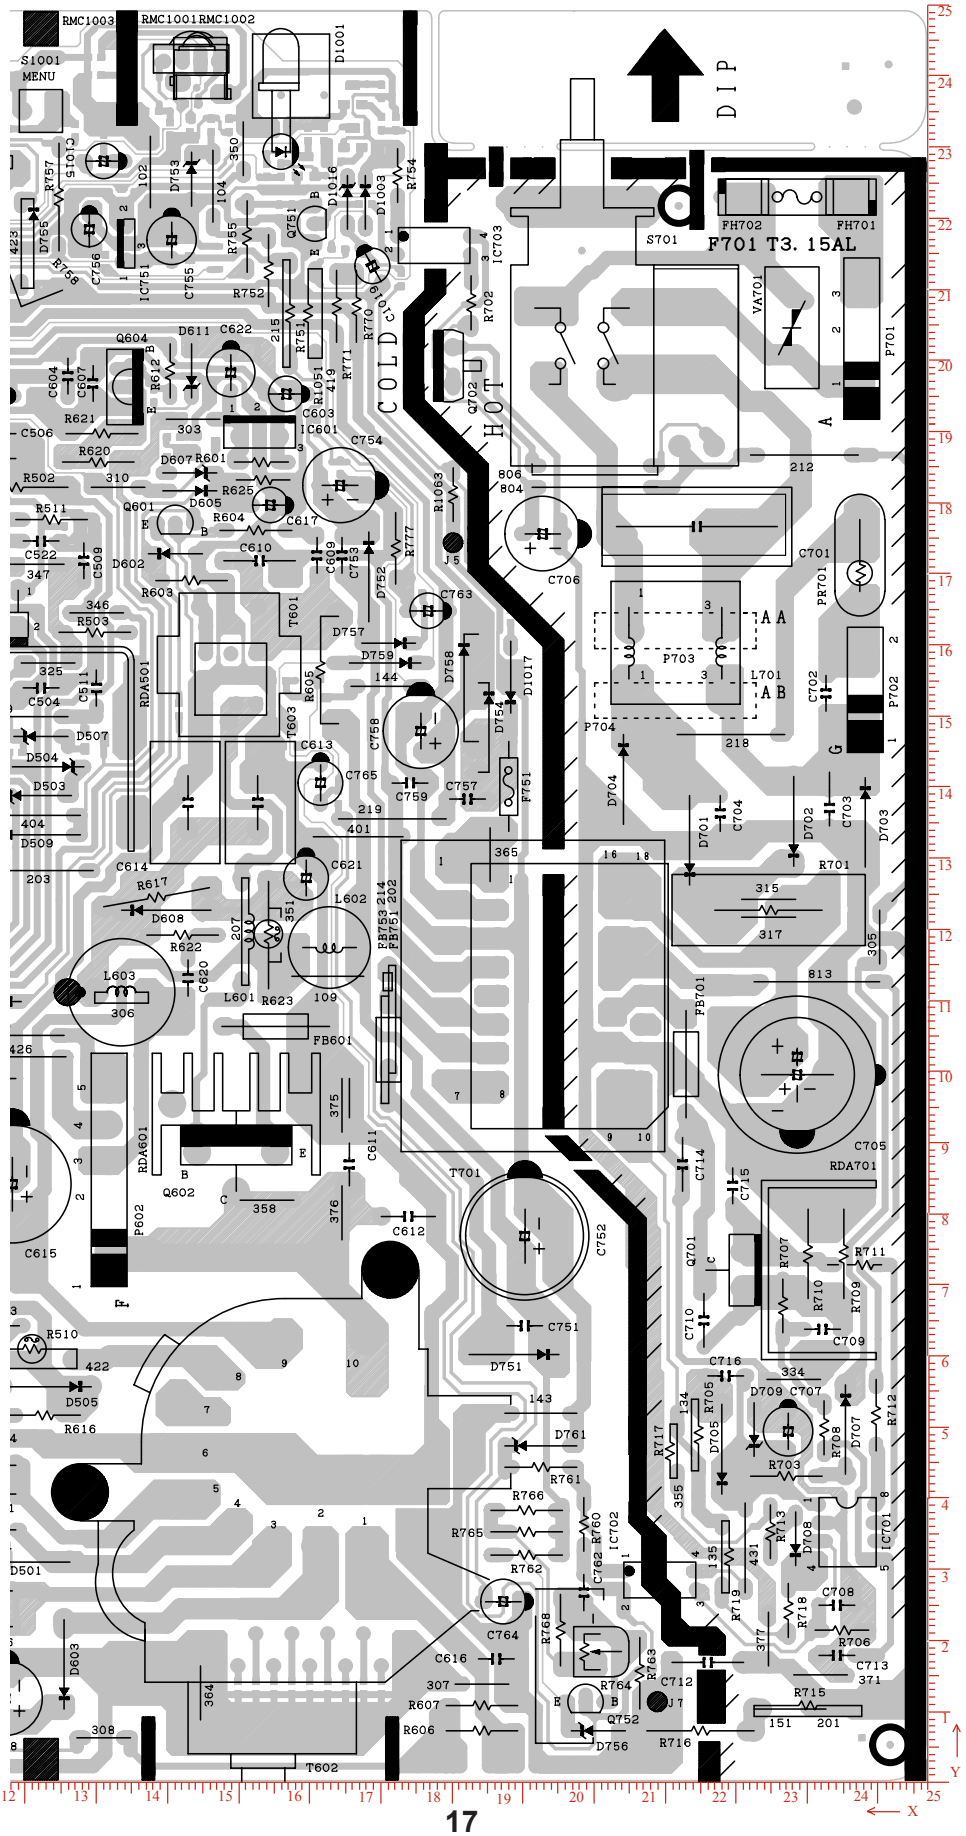
RMC1003
RMC1001
RMC1002
S1001
MENU
D1001
COLD
HOT
DIP
S701
FH702
FH701
F701 T3. 15AL
VA701
P701
IC703
IC601
IC701
Q604
Q601
Q602
Q702
Q751
Q752
Q701
T601
T602
T603
T701
L601
L602
L603
RDA501
RDA601
RDA701
FB601
FB701
P602
P703
P704
L701
F751
J5
J7
D501
D503
D504
D505
D507
D509
D601
D602
D603
D604
D605
D607
D608
D611
D701
D702
D703
D704
D705
D706
D707
D708
D709
D751
D752
D753
D754
D755
D756
D757
D758
D759
D761
C501
C502
C503
C504
C505
C506
C507
C508
C509
C510
C511
C512
C513
C514
C515
C516
C517
C518
C519
C520
C521
C522
C601
C602
C603
C604
C605
C606
C607
C608
C609
C610
C611
C612
C613
C614
C615
C616
C617
C618
C619
C620
C621
C622
C623
C624
C625
C626
C627
C628
C629
C630
C631
C632
C633
C634
C635
C636
C637
C638
C639
C640
C641
C642
C643
C644
C645
C646
C647
C648
C649
C650
C651
C652
C653
C654
C655
C656
C657
C658
C659
C660
C661
C662
C663
C664
C665
C666
C667
C668
C669
C670
C671
C672
C673
C674
C675
C676
C677
C678
C679
C680
C681
C682
C683
C684
C685
C686
C687
C688
C689
C690
C691
C692
C693
C694
C695
C696
C697
C698
C699
C700
C701
C702
C703
C704
C705
C706
C707
C708
C709
C710
C711
C712
C713
C714
C715
C716
C717
C718
C719
C720
C721
C722
C723
C724
C725
C726
C727
C728
C729
C730
C731
C732
C733
C734
C735
C736
C737
C738
C739
C740
C741
C742
C743
C744
C745
C746
C747
C748
C749
C750
C751
C752
C753
C754
C755
C756
C757
C758
C759
C760
C761
C762
C763
C764
C765
R501
R502
R503
R504
R505
R506
R507
R508
R509
R510
R511
R512
R513
R514
R515
R516
R517
R518
R519
R520
R521
R522
R523
R524
R525
R526
R527
R528
R529
R530
R531
R532
R533
R534
R535
R536
R537
R538
R539
R540

F 7340N7A PWB. Copper side

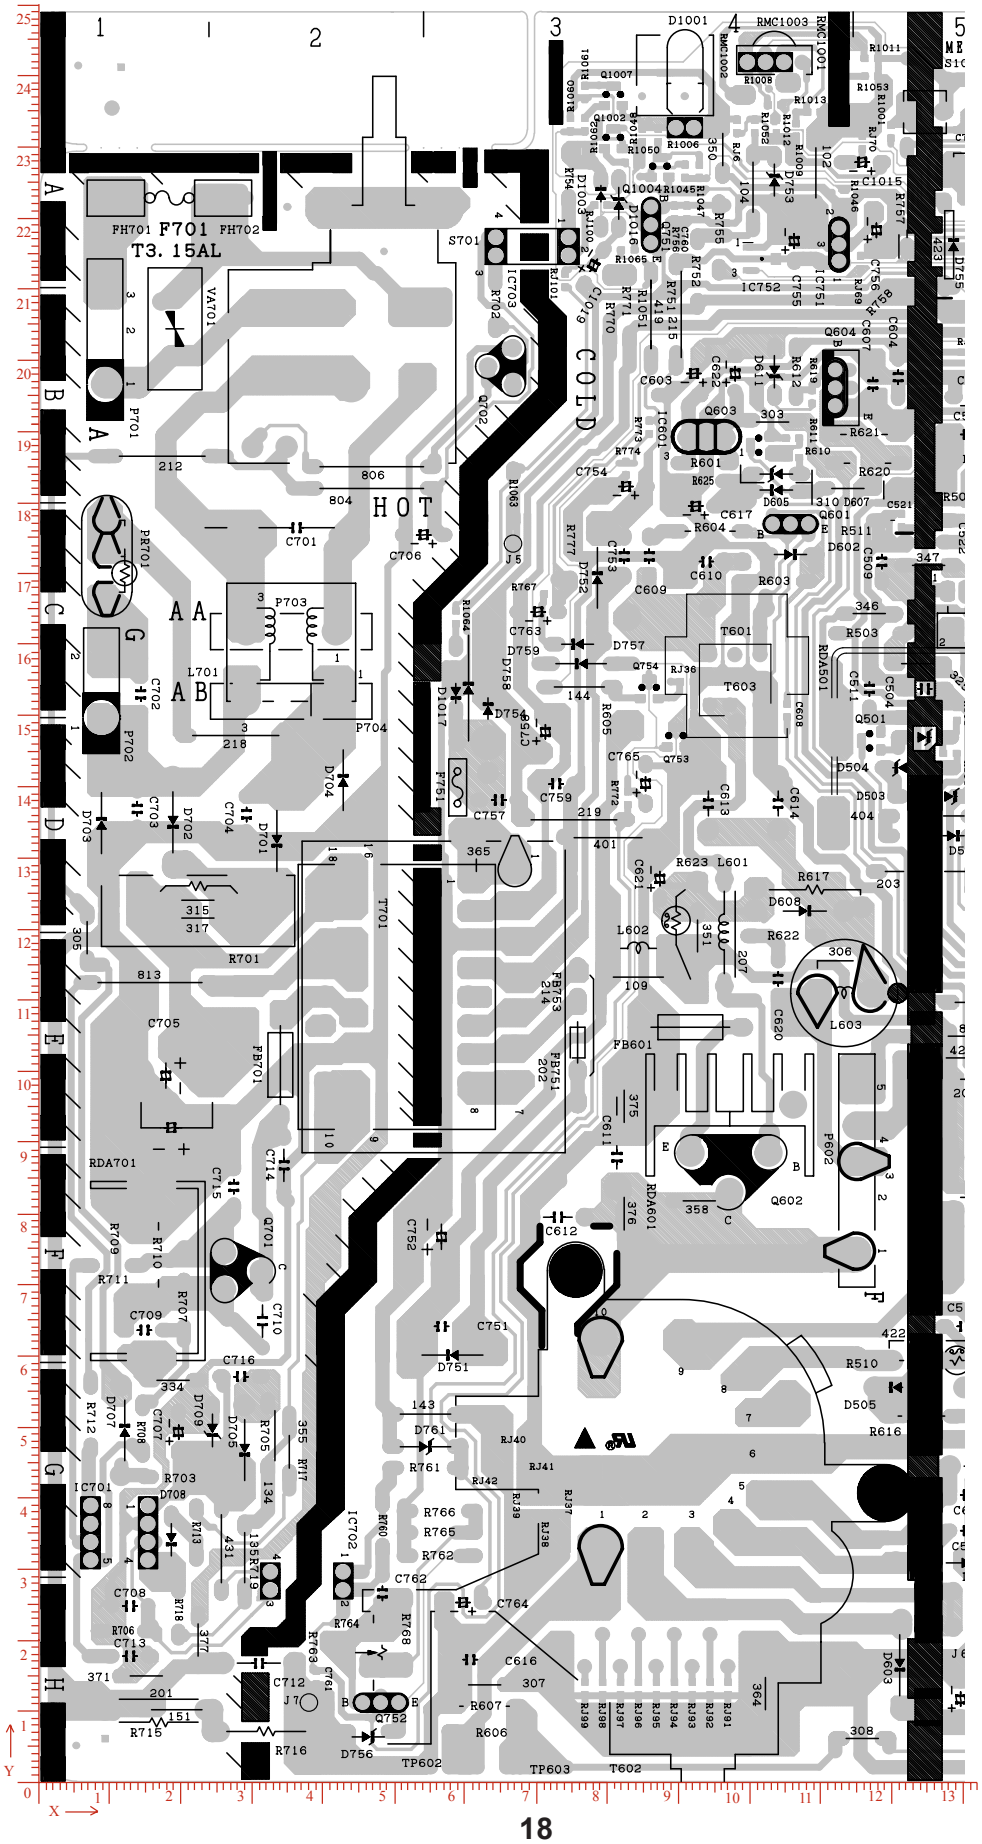

Page 19

F 7340N7A PWB. Copper side

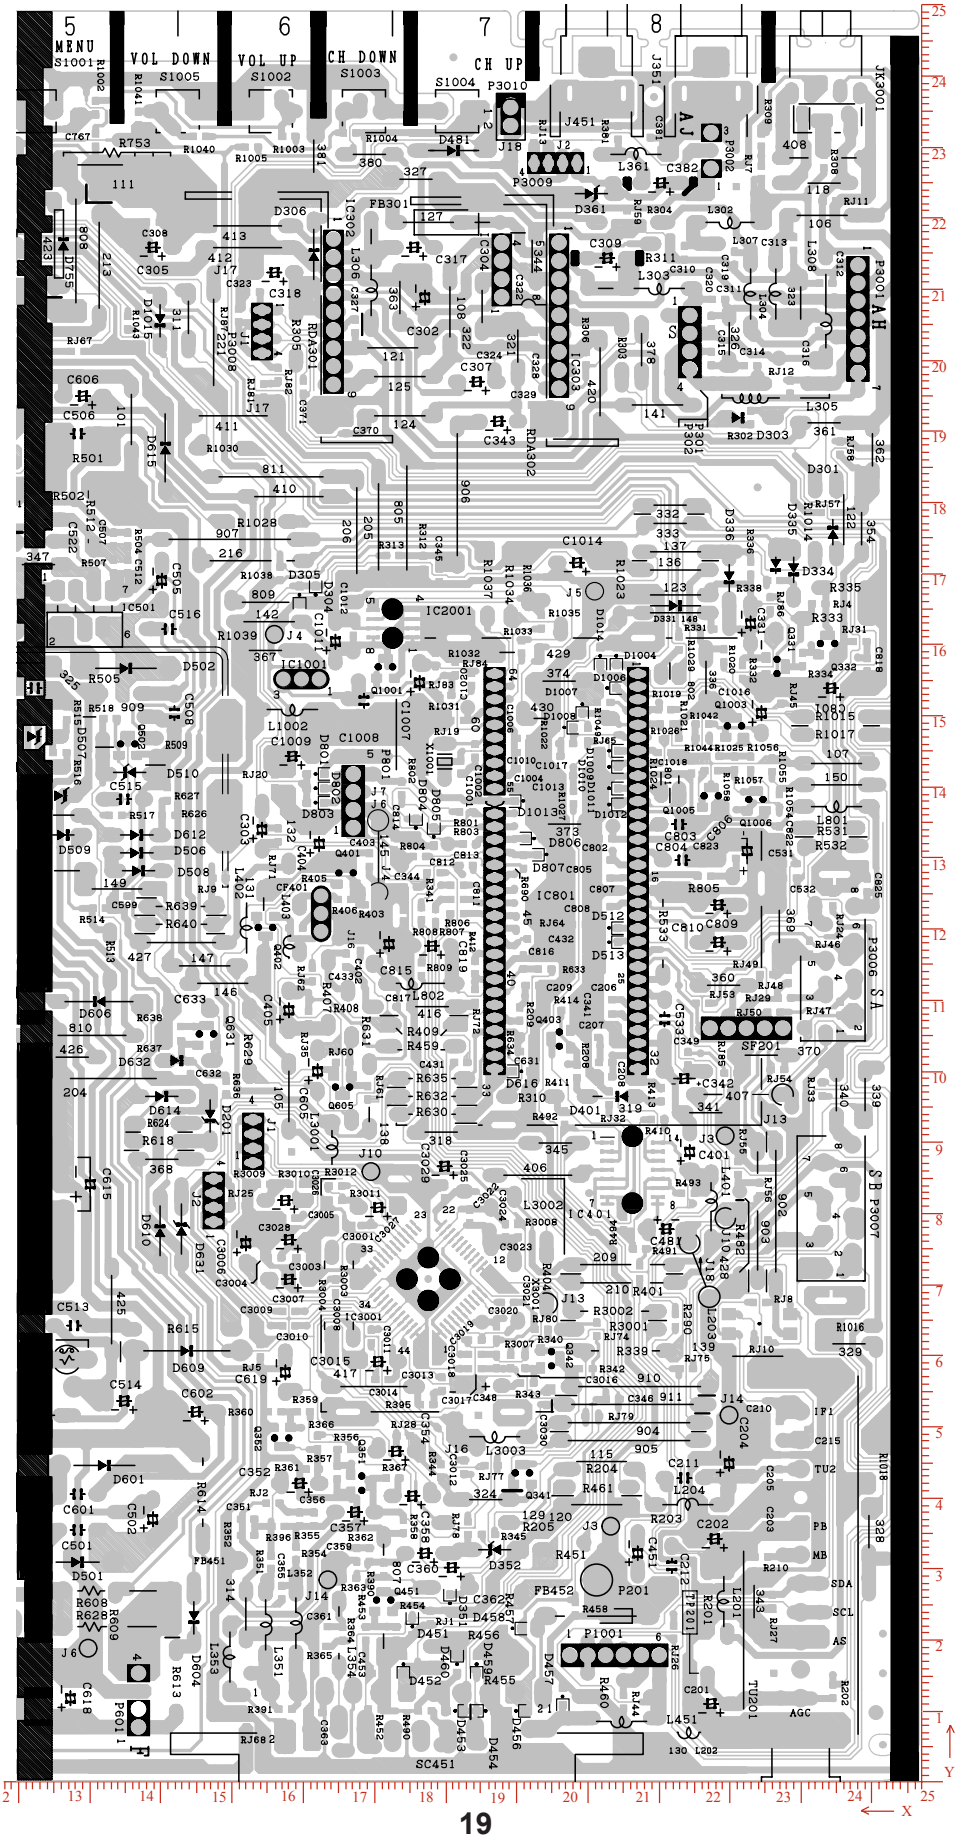

ICs ADDITIONAL INFORMATION

TDA9351(IC801)

QUICK REFERENCE DATA

SYMBOL	PARAMETER	MIN.	TYP.	MAX.	UNIT
Supply					
V_P	supply voltages	–	8.0/3.3	–	V
I_P	supply current	–	135/60	–	mA
Input voltages					
$V_{iVIFrms)}$	video IF amplifier sensitivity (RMS value)	–	75	–	µV
$V_{iSIF(rms)}$	QSS sound IF amplifier sensitivity (RMS value)	–	60	–	µV
$V_{iAUDIO(rms)}$	external audio input (RMS value)	–	500	–	mV
$V_{iCVBS(p-p)}$	external CVBS/Y input (peak-to-peak value)	–	1.0	–	V
$V_{iCHROMA(p-p)}$	external chroma input voltage (burst amplitude) (peak-to-peak value)	–	0.3	–	V
$V_{iRGB(p-p)}$	RGB inputs (peak-to-peak value)	–	0.7	–	V
$V_{iYIN(p-p)}$	luminance input signal (peak-to-peak value)	–	1.4	–	V
$V_{iUVIN(p-p)}$	U/V input signal (peak-to-peak value)	–	1.33/1.05	–	V
Output signals					
$V_{o(IFVO)(p-p)}$	demodulated CVBS output (peak-to-peak value)	–	2.5	–	V
$V_{o(QSSO)(rms)}$	sound IF intercarrier output in QSS versions (RMS value)	–	100	–	mV
$V_{o(AMOUT)(rms)}$	demodulated AM sound output in QSS versions (RMS value)	–	500	–	mV
$I_{o(AGCOUT)}$	tuner AGC output current range	0	–	5	mA
$V_{oRGB(p-p)}$	RGB output signal amplitudes (peak-to-peak value)	–	2.0	–	V
I_{oHOUT}	horizontal output current	10	–	–	mA
I_{oVERT}	vertical output current (peak-to-peak value)	1	–	–	mA
I_{oEWD}	EW drive output current	1.2	–	–	mA

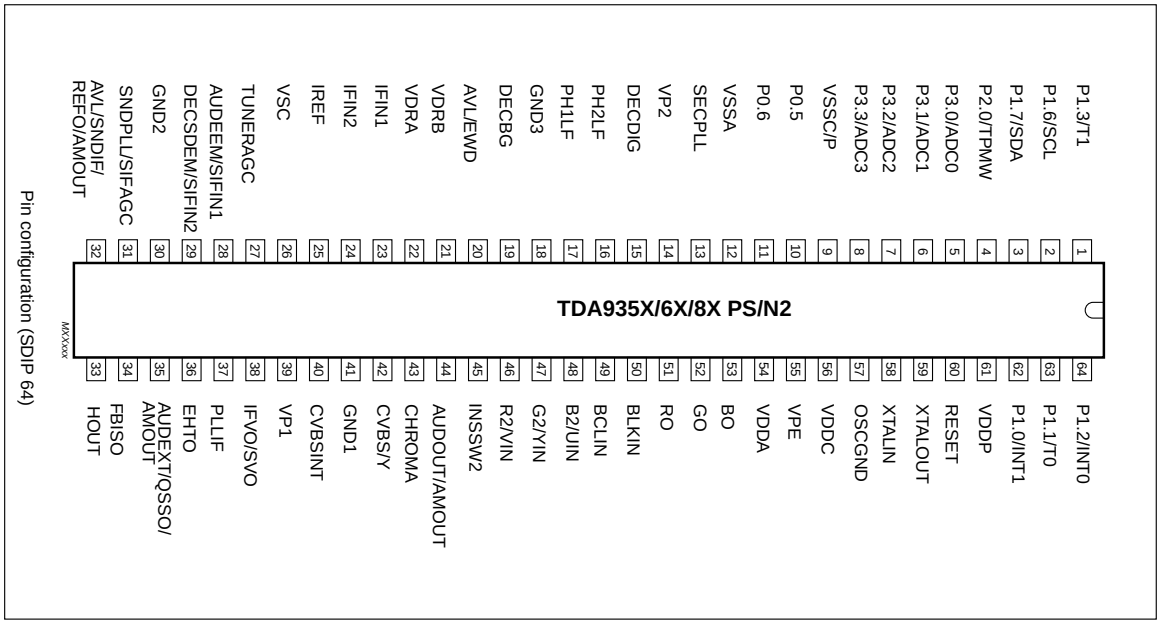

TDA9351(IC801)

BLOCK DIAGRAM

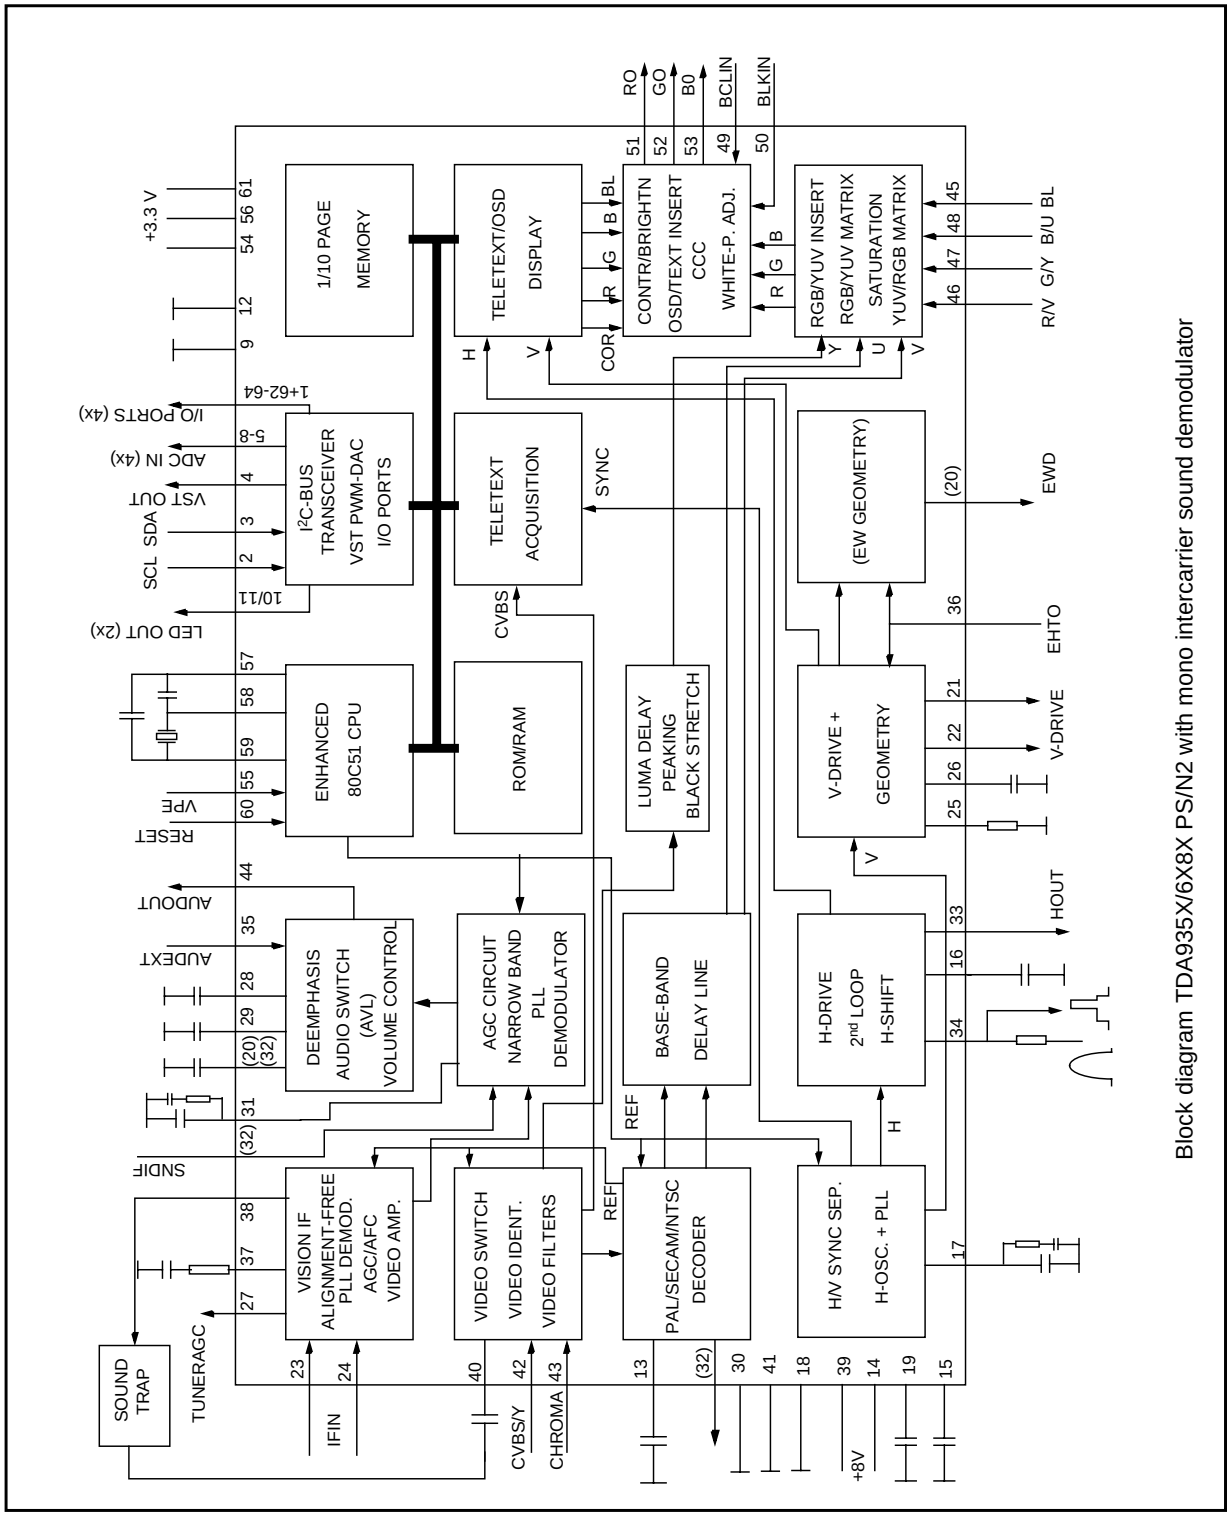

Block diagram TDA935X/6X8X PS/N2 with mono intercarrier sound demodulator

TDA9351(IC801)

PINNING

SYMBOL	PIN	DESCRIPTION
P1.3/T1	1	port 1.3 or Counter/Timer 1 input
P1.6/SCL	2	port 1.6 or I^2C-bus clock line
P1.7/SDA	3	port 1.7 or I^2C-bus data line
P2.0/TPWM	4	port 2.0 or Tuning PWM output
P3.0/ADC0	5	port 3.0 or ADC0 input
P3.1/ADC1	6	port 3.1 or ADC1 input
P3.2/ADC2	7	port 3.2 or ADC2 input
P3.3/ADC3	8	port 3.3 or ADC3 input
VSSC/P	9	digital ground for μ-Controller core and periphery
P0.5	10	port 0.5 (8 mA current sinking capability for direct drive of LEDs)
P0.6	11	port 0.6 (8 mA current sinking capability for direct drive of LEDs)
VSSA	12	analog ground of Teletext decoder and digital ground of TV-processor
SECPLL	13	SECAM PLL decoupling
VP2	14	2^{nd} supply voltage TV-processor (+8V)
DECDIG	15	decoupling digital supply of TV-processor
PH2LF	16	phase-2 filter
PH1LF	17	phase-1 filter
GND3	18	ground 3 for TV-processor
DECBG	19	bandgap decoupling
AVL/EWD (1)	20	Automatic Volume Levelling /East-West drive output
VDRB	21	vertical drive B output
VDRA	22	vertical drive A output
IFIN1	23	IF input 1
IFIN2	24	IF input 2
IREF	25	reference current input
VSC	26	vertical sawtooth capacitor
TUNERAGC	27	tuner AGC output
AUDEEM/SIFIN1(1)	28	audio deemphasis or SIF input 1
DECSDEM/SIFIN2(1)	29	decoupling sound demodulator or SIF input 2
GND2	30	ground 2 for TV processor
SNDPLL/SIFAGC(1)	31	narrow band PLL filter /AGC sound IF
AVL/SNDIF/REF0/ AMOUT(1)	32	Automatic Volume Levelling / sound IF input / subcarrier reference output /AM output (non controlled)
HOUT	33	horizontal output
FBISO	34	flyback input/sandcastle output
AUDEXT/ QSSO/AMOUT(1)	35	external audio input /QSS intercarrier out /AM audio output (non controlled)
EHTO	36	EHT/overvoltage protection input
PLLIF	37	IF-PLL loop filter
IFVO/SVO	38	IF video output / selected CVBS output
VP1	39	main supply voltage TV-processor (+8 V)
CVBSINT	40	internal CVBS input
GND1	41	ground 1 for TV-processor
CVBS/Y	42	external CVBS/Y input
CHROMA	43	chrominance input (SVHS)
AUDOUT /AMOUT(1)	44	audio output /AM audio output (volume controlled)

TDA9351(IC801)

SYMBOL	PIN	DESCRIPTION
INSSW2	45	2nd RGB / YUV insertion input
R2/VIN	46	2nd R input / V (R-Y) input
G2/YIN	47	2nd G input / Y input
B2/UIN	48	2nd B input / U (B-Y) input
BCLIN	49	beam current limiter input / (V-guard input, note 2)
BLKIN	50	black current input / (V-guard input, note 2)
RO	51	Red output
GO	52	Green output
BO	53	Blue output
VDDA	54	analog supply of Teletext decoder and digital supply of TV-processor (3.3 V)
VPE	55	OTP Programming Voltage
VDDC	56	digital supply to core (3.3 V)
OSCGND	57	oscillator ground supply
XTALIN	58	crystal oscillator input
XTALOUT	59	crystal oscillator output
RESET	60	reset
VDDP	61	digital supply to periphery (+3.3 V)
P1.0/INT1	62	port 1.0 or external interrupt 1 input
P1.1/T0	63	port 1.1 or Counter/Timer 0 input
P1.2/INT0	64	port 1.2 or external interrupt 0 input

Note

1. The function of pin 20, 28, 29, 31, 32, 35 and 44 is dependent on the IC version (mono intercarrier FM demodulator / QSS IF amplifier and East-West output or not) and on some software control bits. The valid combinations are given in table 1.
2. The vertical guard function can be controlled via pin 49 or pin 50. The selection is made by means of the IVG bit in subaddress 2BH.

Table 1 Pin functions for various versions

IC version	FM-PLL version				QSS version					
East-West Y/N	N		Y		N			Y		
CMB1/CMB0 bits	00	01/10/11	00	01/10/11	00	01/10/11		00	01/10/11	
AM bit	–	–	–	–	–	0	1	–	0	1
Pin 20	AVL		EWD		AVL			EWD		
Pin 28	AUDEEM				SIFIN1					
Pin 29	DECSDEM				SIFIN2					
Pin 31	SNDPLL				SIFAGC					
Pin 32	SNDIF(1)	REFO(2)	AVL/SNDIF(1)	REFO(2)	AMOUT	REFO(2)		AMOUT	REFO(2)	
Pin 35	AUDEXT				AUDEXT	QSSO	AMOUT	AUDEXT	QSSO	AMOUT
Pin 44	AUDOUT				controlled AM or audio out					

Note

1. When additional (external) selectivity is required for FM-PLL system pin 32 can be used as sound IF input. This function is selected by means of SIF bit in subaddress 28H.
2. The reference output signal is only available for the CMB1/CMB0 setting of 0/1. For the other settings this pin is a switch output (see also table 67).

TEA1507(IC701)

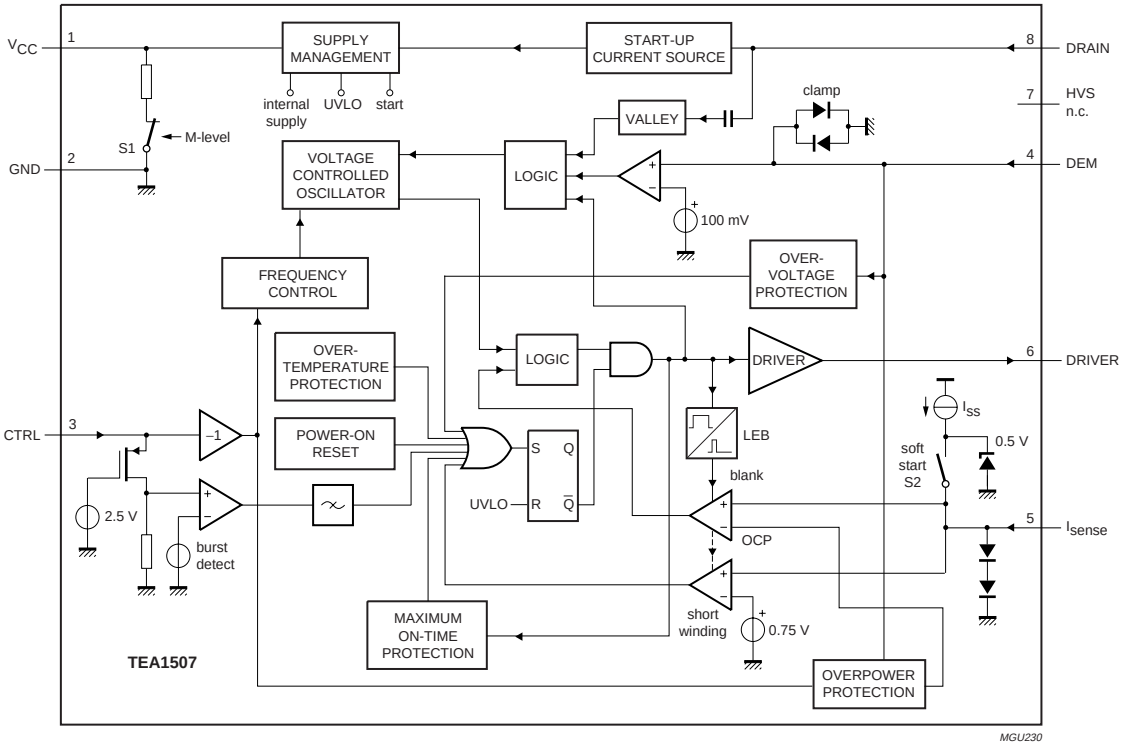

Block diagram.

PINNING

SYMBOL	PIN	DESCRIPTION
V_{CC}	1	supply voltage
GND	2	ground
CTRL	3	control input
DEM	4	input from auxiliary winding for demagnetization timing, OVP and OPP
I_{sense}	5	programmable current sense input
DRIVER	6	gate driver output
HVS	7	high voltage safety spacer, not connected
DRAIN	8	drain of external MOS switch, input for start-up current and valley sensing

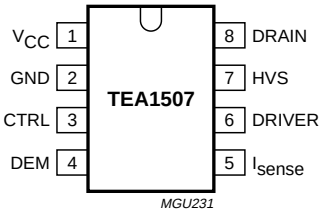

Pin configuration.

AN7523(IC303)

Circuit Function Block Diagram

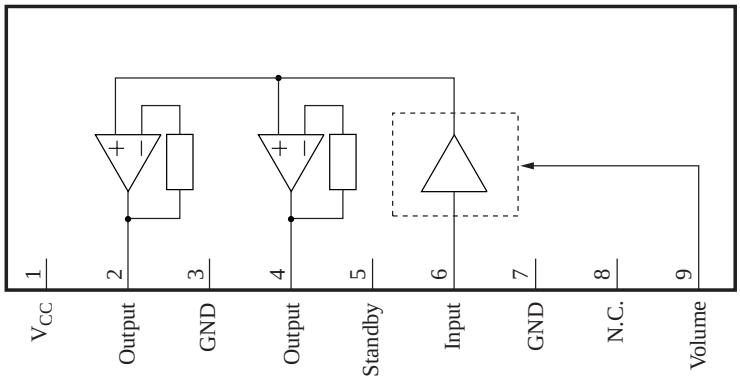

Pin Descriptions

Pin No.	Description
1	Vcc
2	Ch Output (+)
3	GND
4	Ch Output (-)
5	Standby
6	Ch Input
7	GND
8	N.C
9	Volume

Note: Do not apply voltage or current to NC pin from outside

AN5522(IC501)

Circuit Function Block Diagram

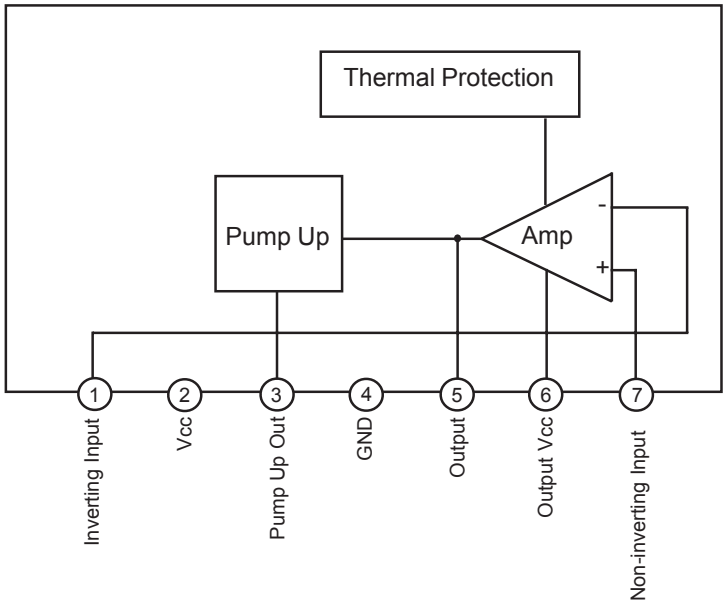

Pin Descriptions

Pin No.	Pin Name
1	Inverting Input
2	Power Supply
3	Pump-up Output
4	GND
5	Vertical Output
6	Vertical Output Power Supply
7	Non-inverting Input

SCHEMATIC DIAGRAMS

Description

Safety note:

1. Disconnect the AC plug from the AC outlet before replacing parts.

2. Semiconductor heat sinks should be regarded as potential shock hazards when the chassis is operating.

Important safety note:

Parts marked with « ⚠ » ( ) are important for maintaining the safety of the set. Be sure to replace these parts with specified ones for maintaining the safety and performance of the set.

CAUTION
This circuit diagram is original one, therefore there may be slight difference from yours.

Note:

1. The unit of resistance «ohm»is omitted (K=1000 ohms. M= Megaohm).
2. All resistors are 1/16 watt. unless otherwise noted.
3. All capacitors are μF, unless otherwise noted (P=μμF).
4. The capacitor with Part No. RC-FZ9XXXBMNJ is designed to with stand 63V.
5. The capacitor with Part No. RC-FZ4XXXBMNJ is designed to with stand 50V.

Service precaution:

The area enclosed by this line is directly (-·-·-) connected with AC mains voltage.
When servicing the area, connect an insulating transformer between TV receiver and AC line to eliminate hazard of electric shock.

Waveform measurement condition:
Colour bar generator signal of 70 dB from RF input.

Waveforms

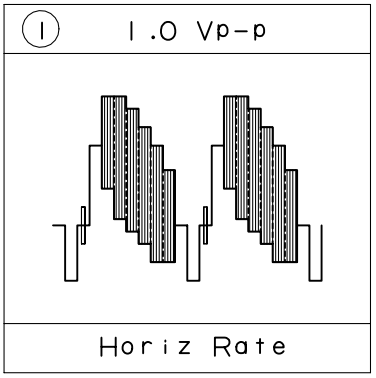

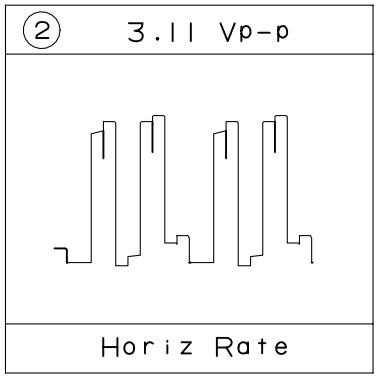

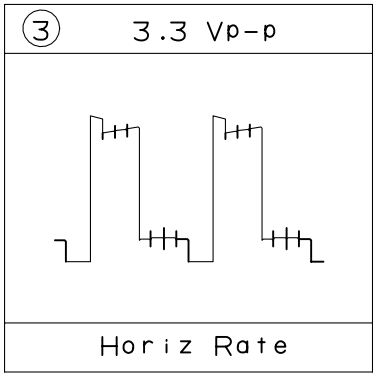

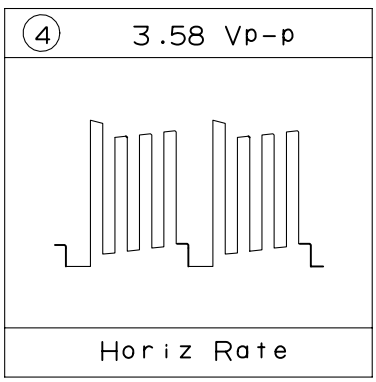

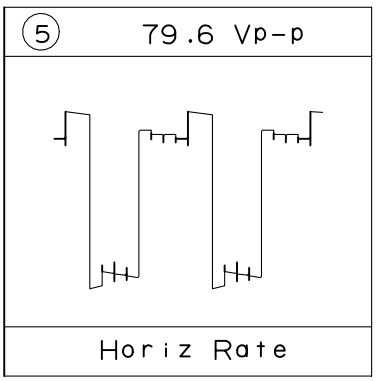

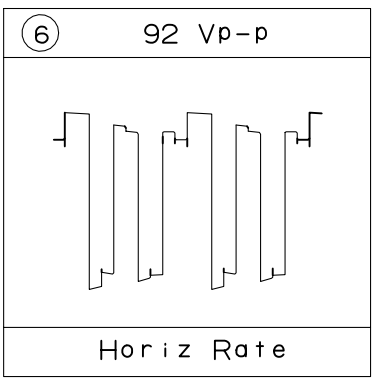

⑦ 90 Vp-p

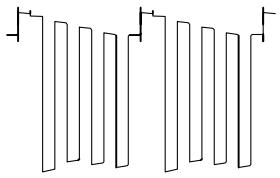

Horiz Rate

⑧ 3.14 Vp-p



Vert Rate

⑨ 2.58 Vp-p

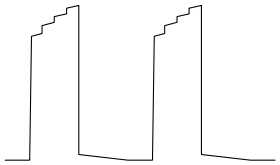

Horiz Rate

⑩ 120 Vp-p

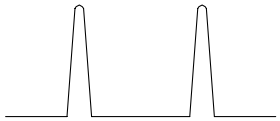

Horiz Rate

⑪ 9.2 Vp-p

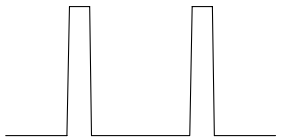

Horiz Rate

⑫ 0.14 Vp-p



Vert Rate

⑬ 0.192 Vp-p

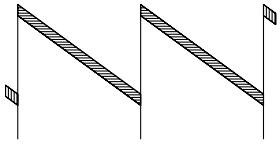

Vert Rate

⑭ 1.36 Vp-p

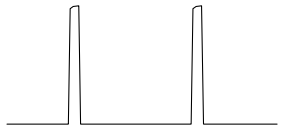

Vert Rate

⑮ 48.6 Vp-p



Vert Rate

⑯ 145 Vp-p

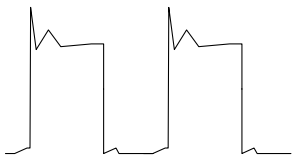

Horiz Rate

⑰ 1055 Vp-p

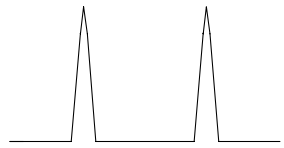

Horiz Rate

⑱ 612 Vp-p

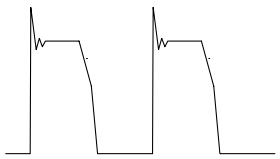

Vert Rate

⑲ 2.0 Vp-p

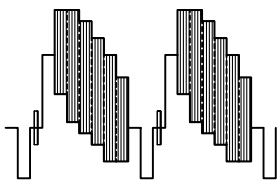

Horiz Rate

Schematic Diagram of Mother Unit (F7340N7A, 00 Version)

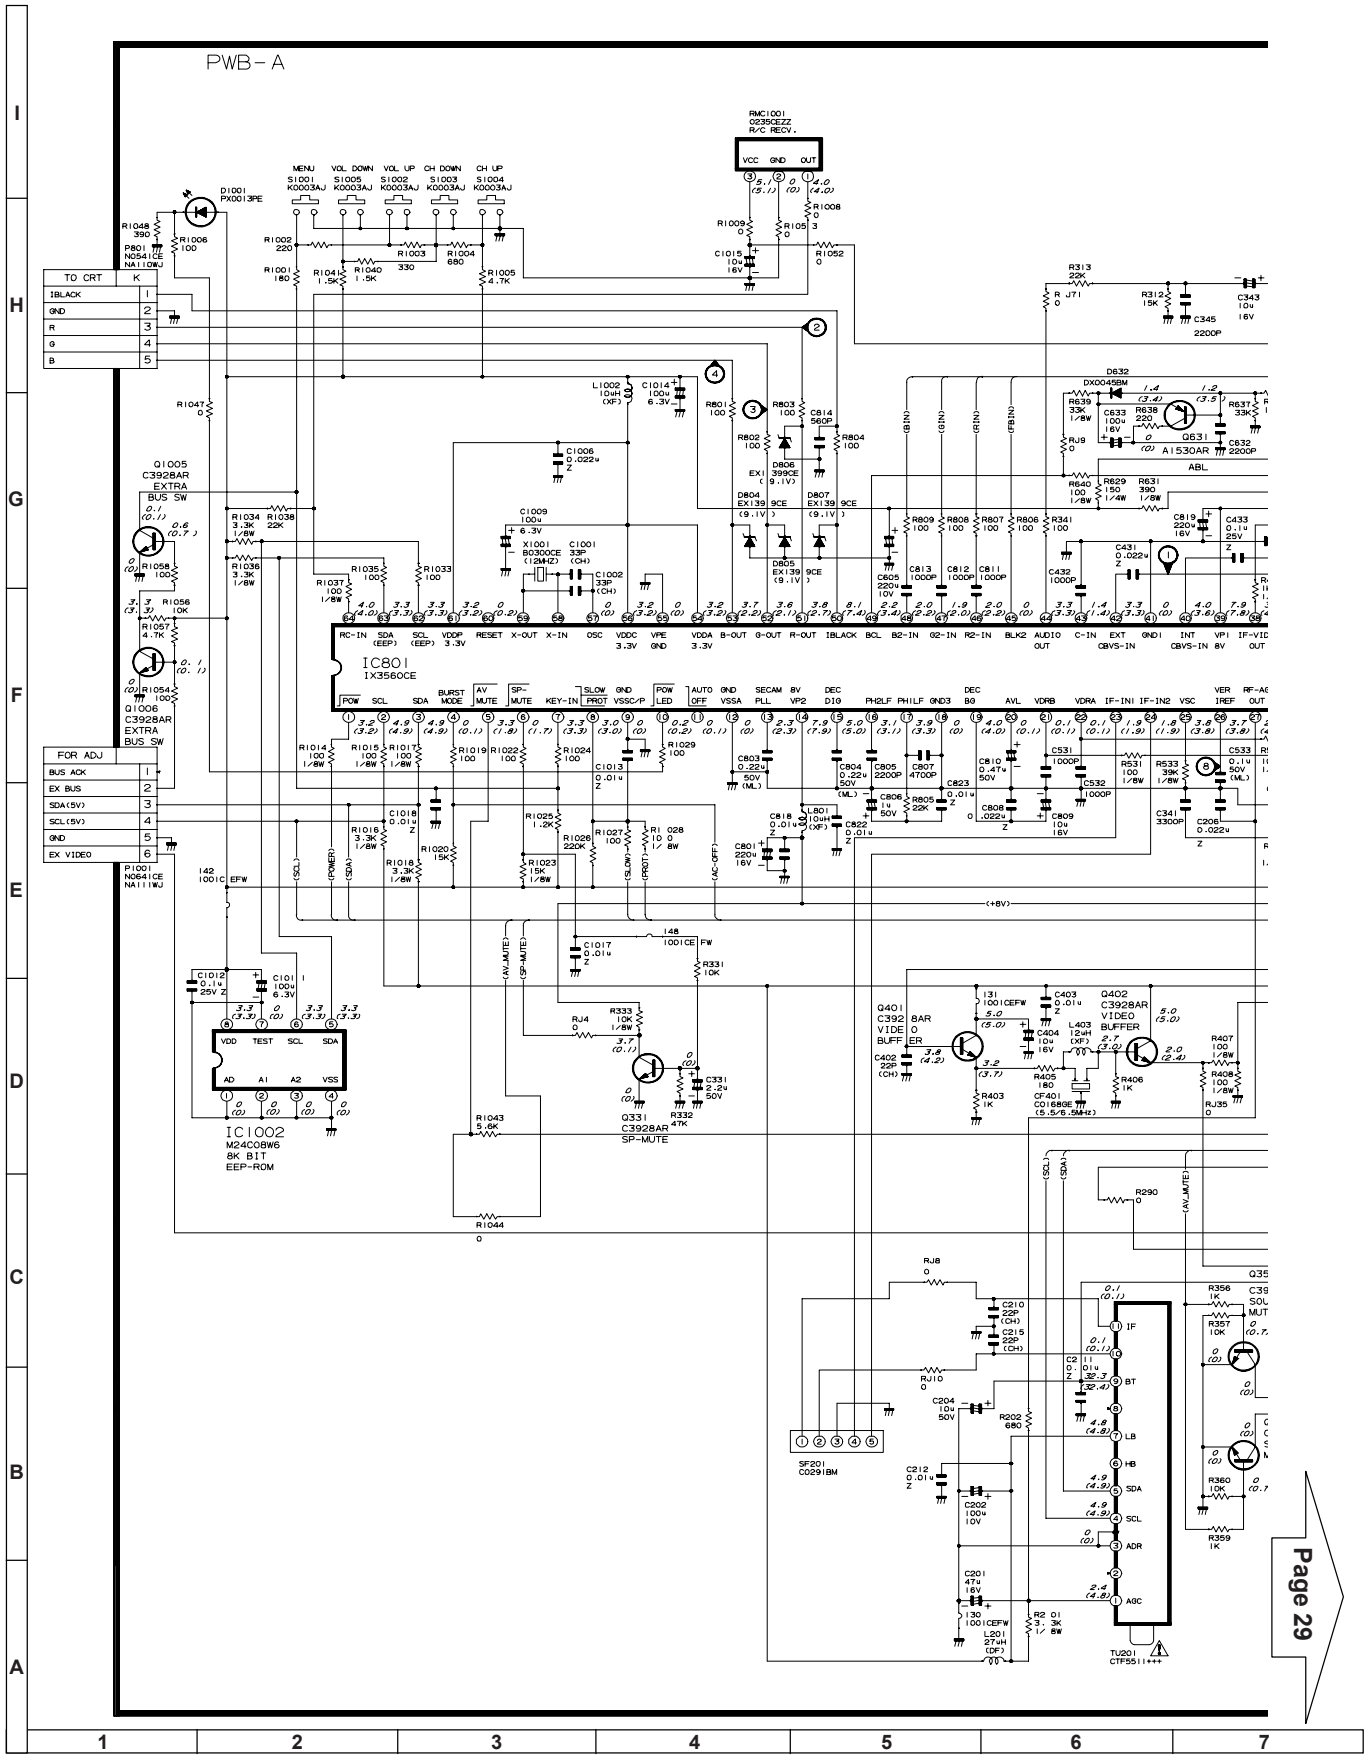

Schematic Diagram of Mother Unit (F7340N7A, 00 Version)

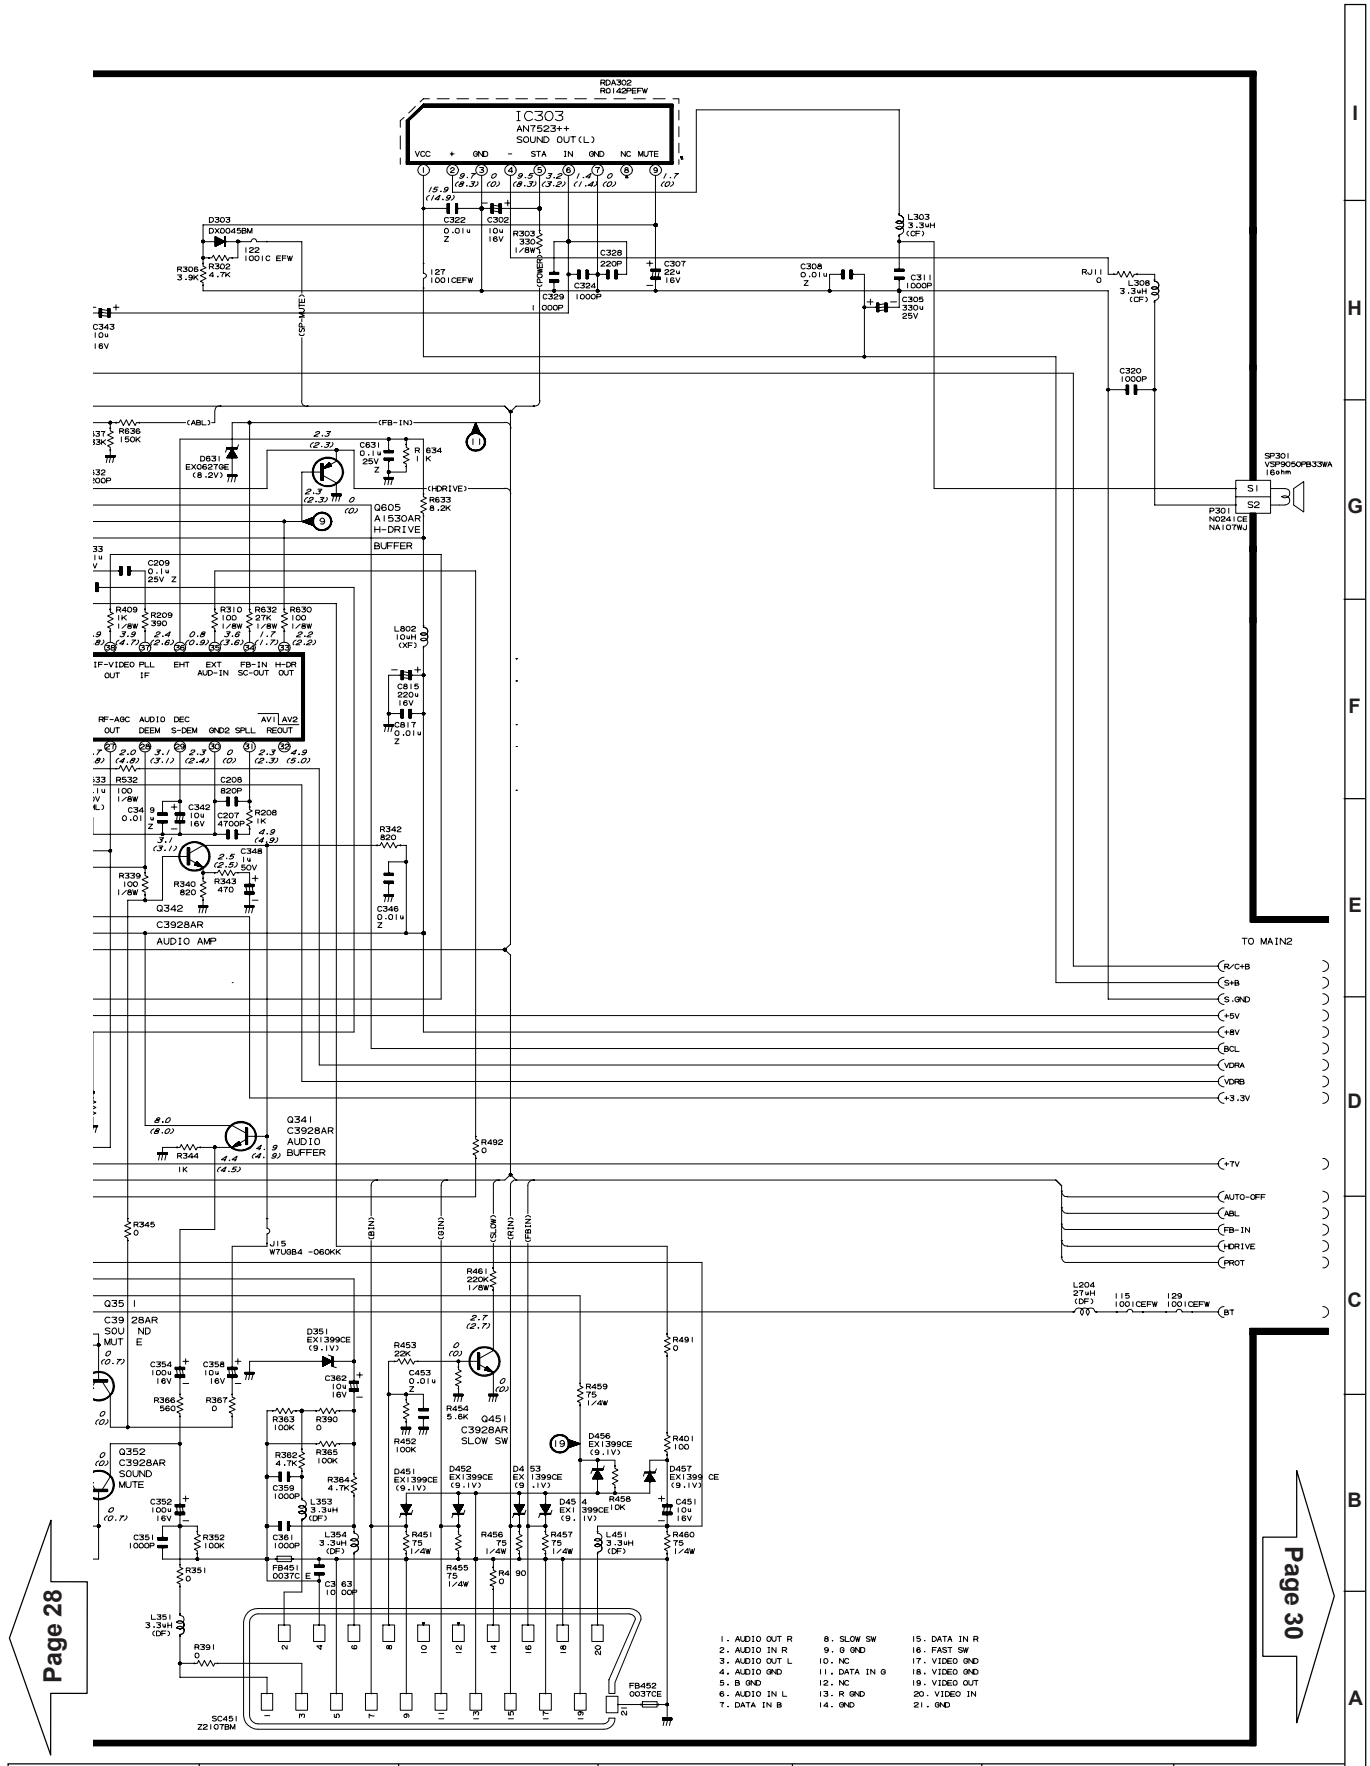

Page 28
Page 30

Schematic Diagram of Mother Unit (F7340N7A, 00 Version)

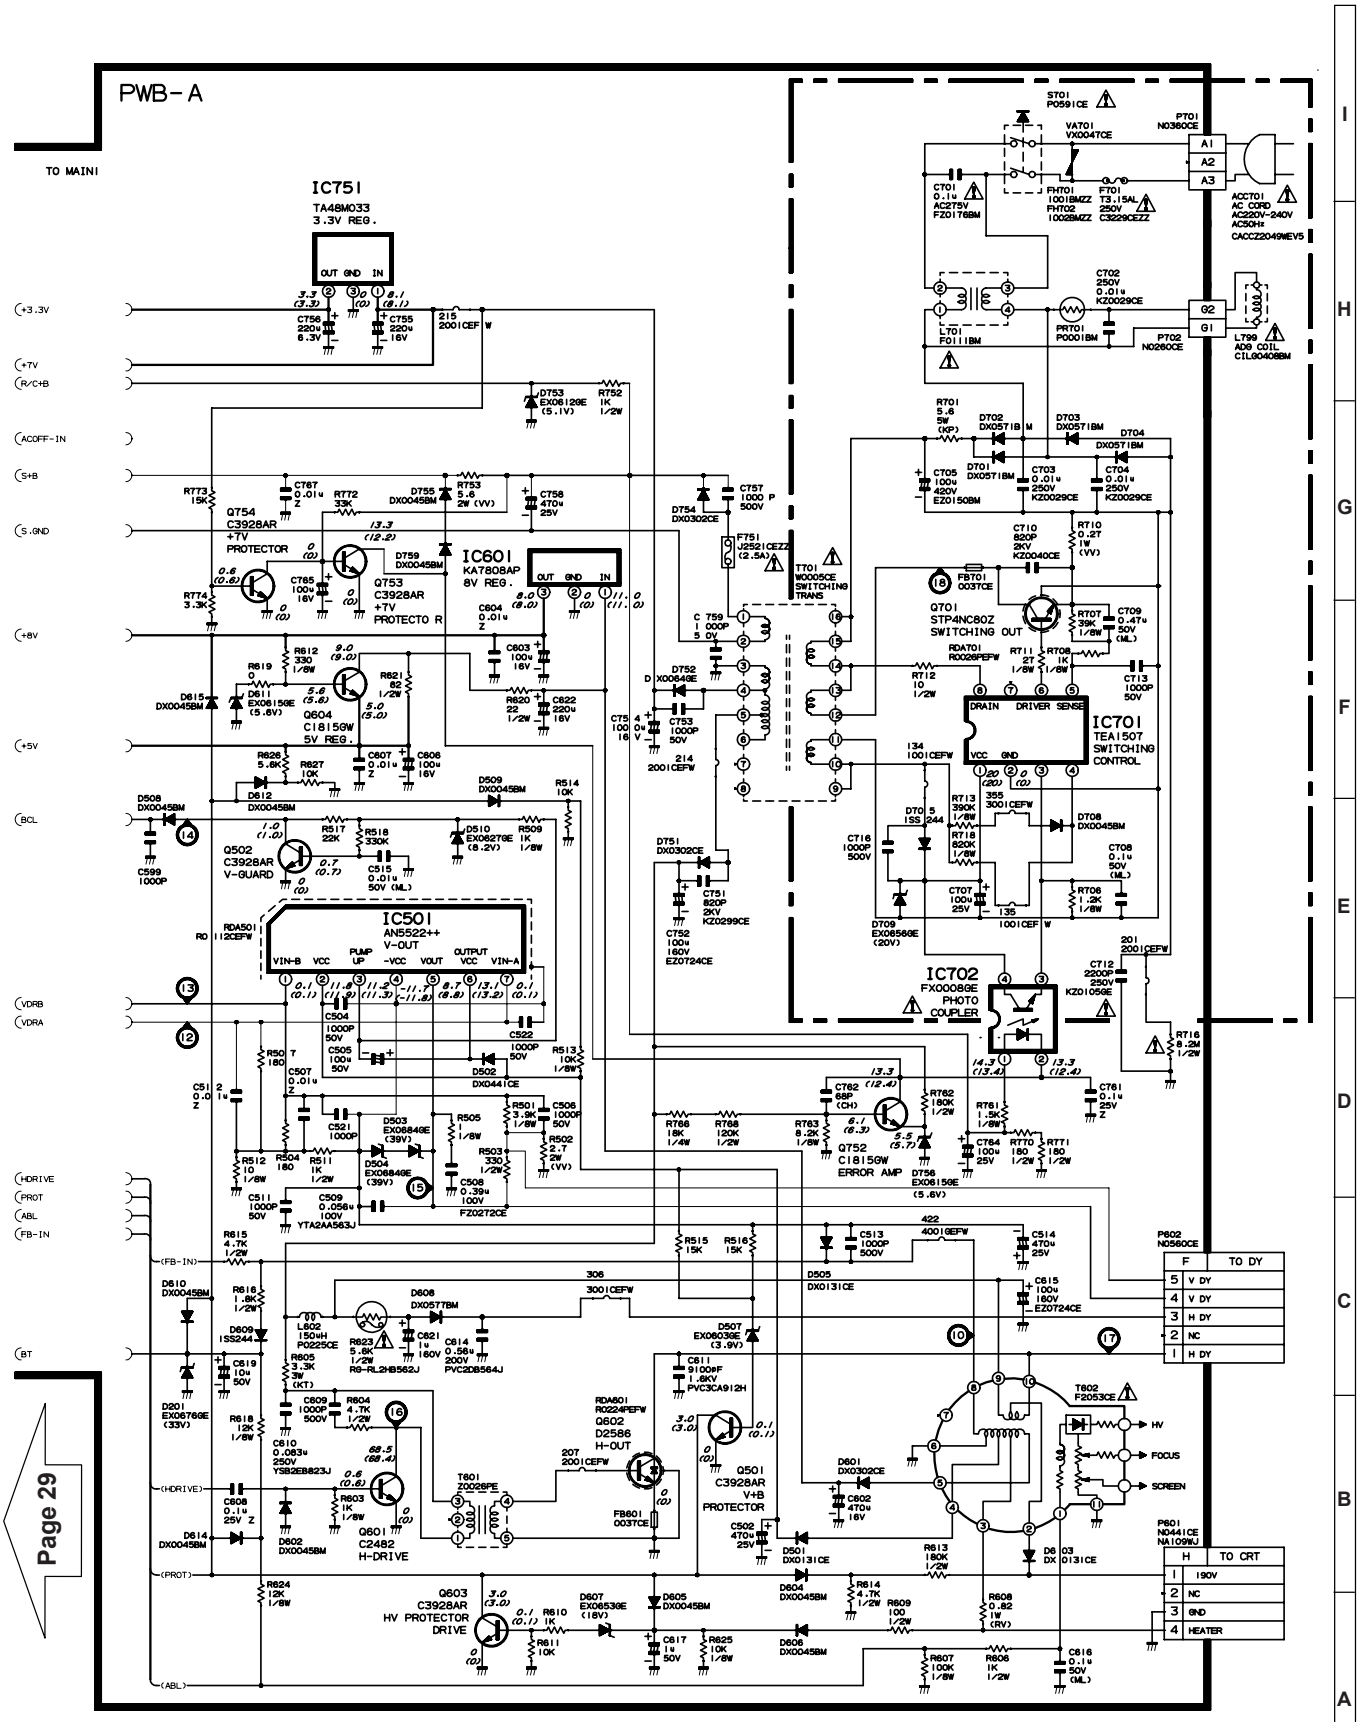

Schematic Diagram of CRT Unit (F7341N0, 00 Version)

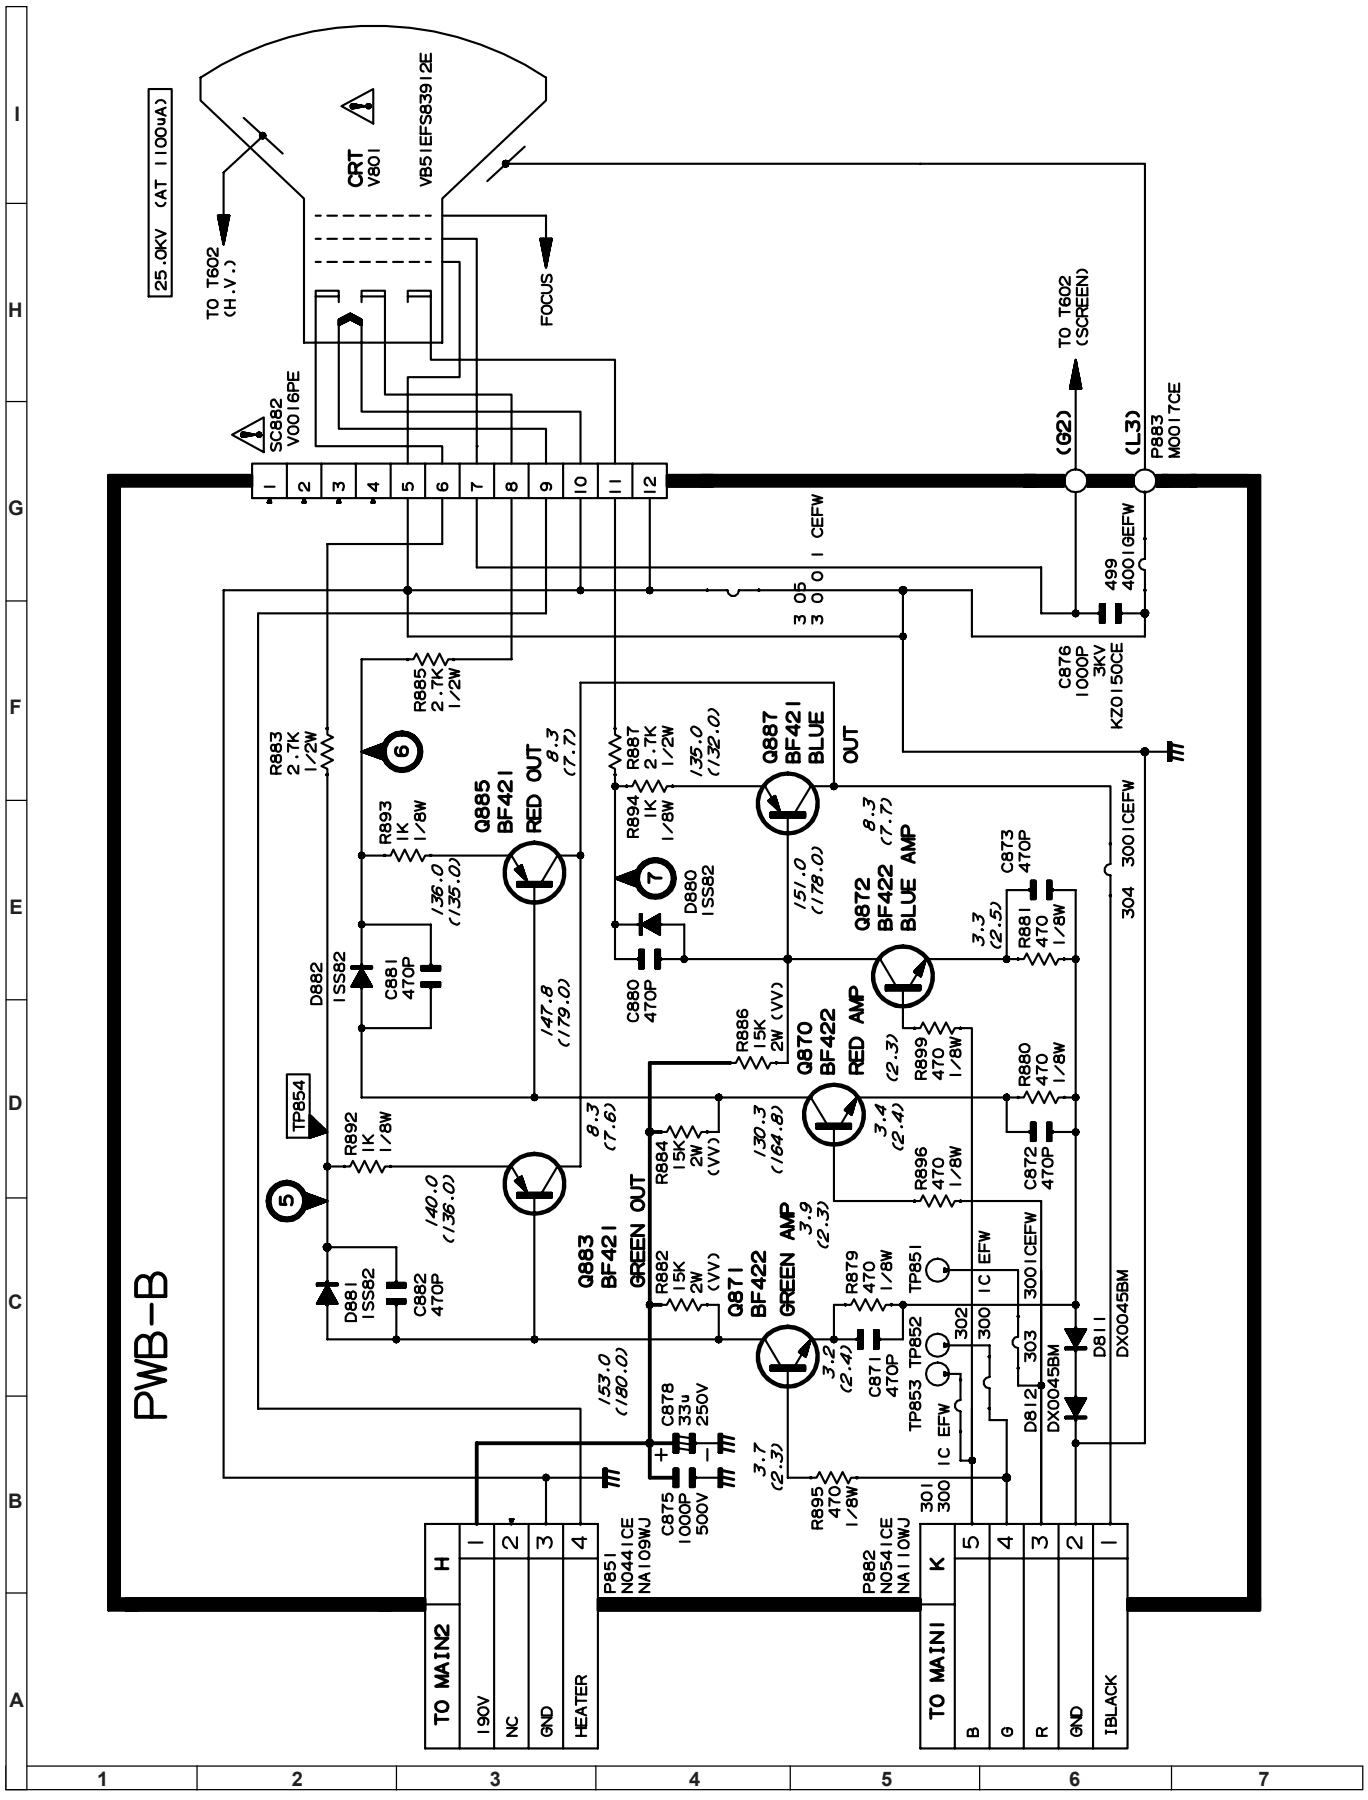

BLOCK DIAGRAMS

Mother Unit

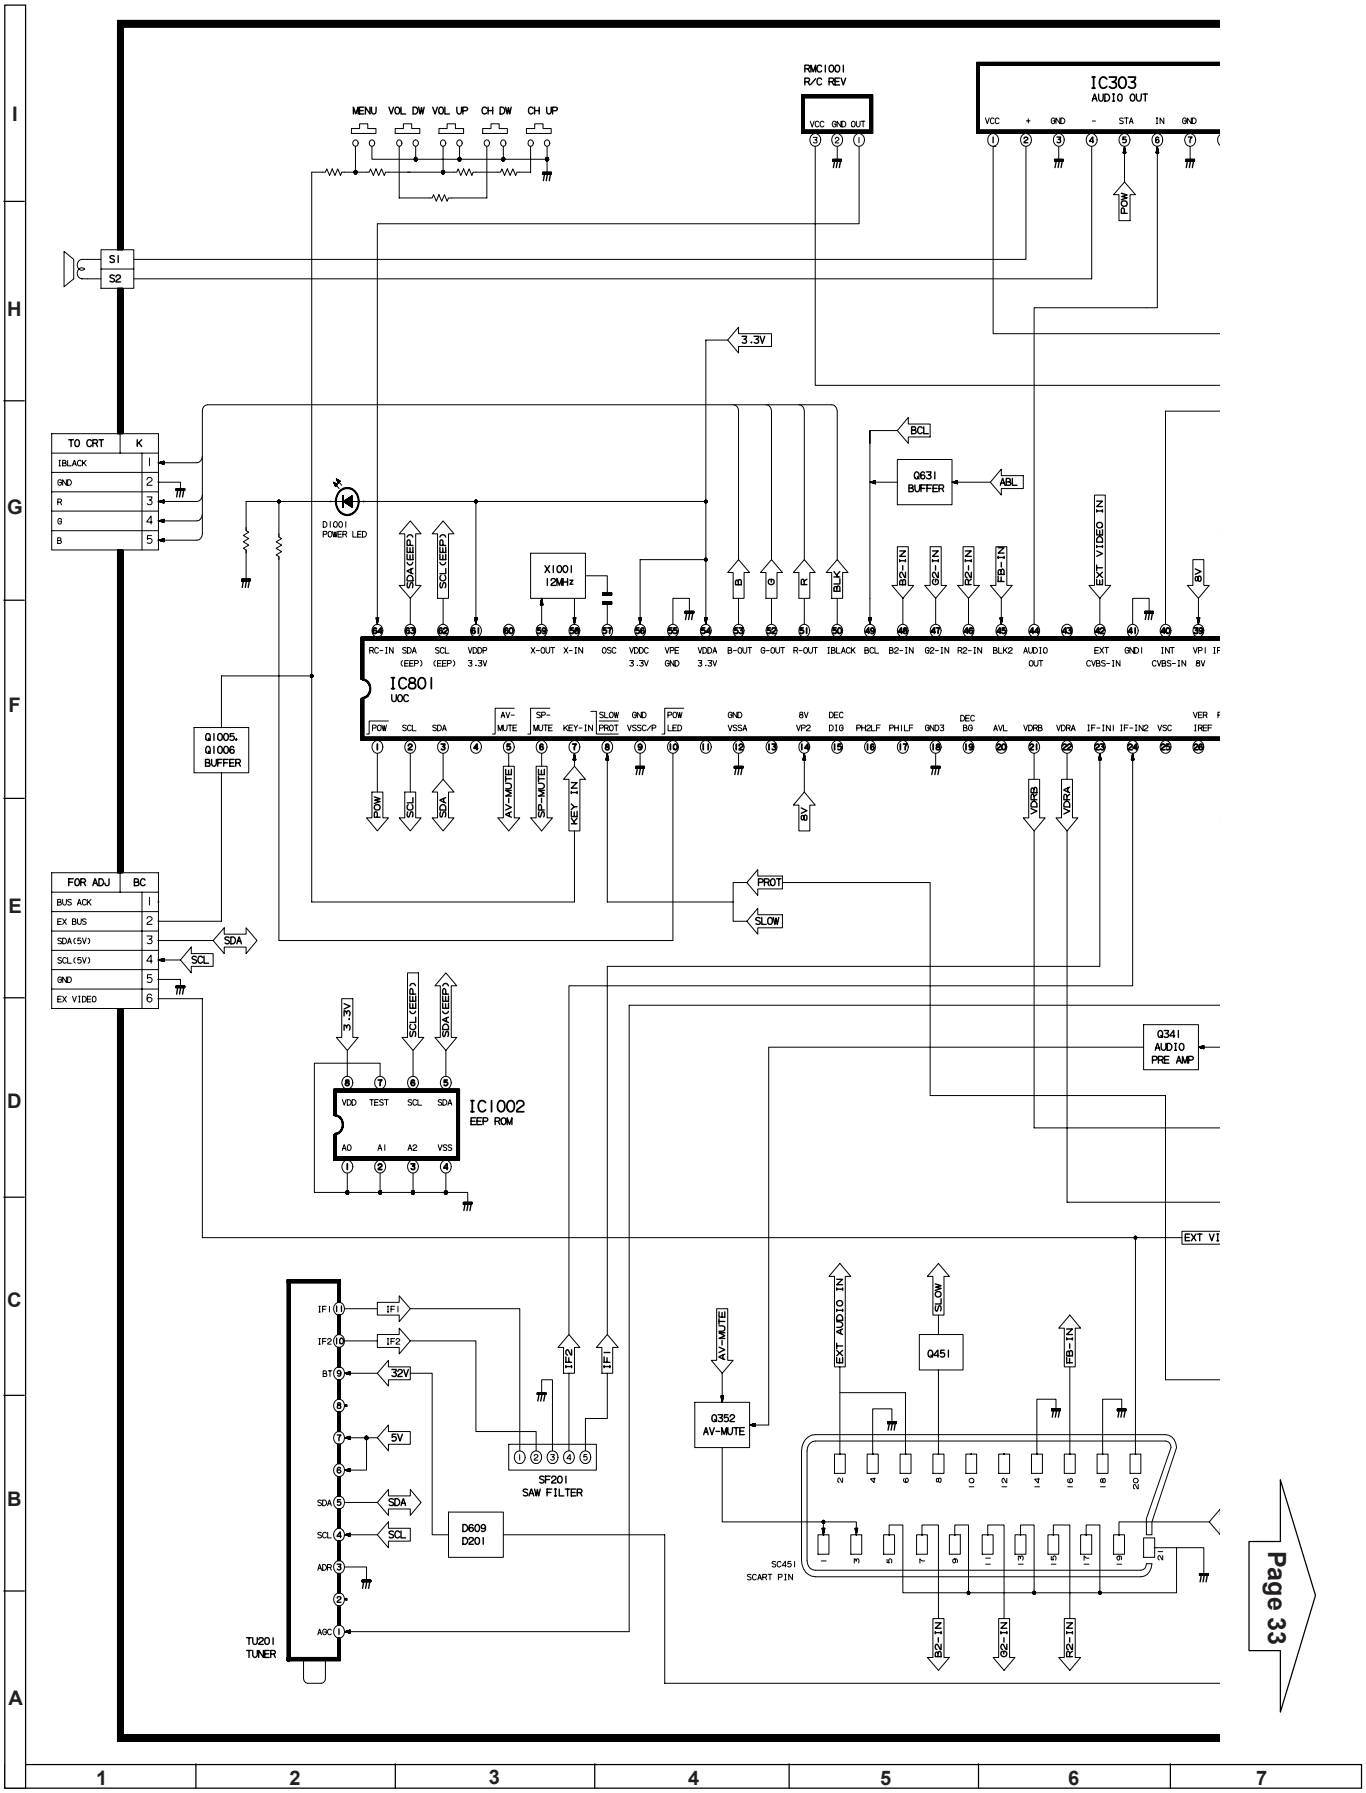

Mother Unit

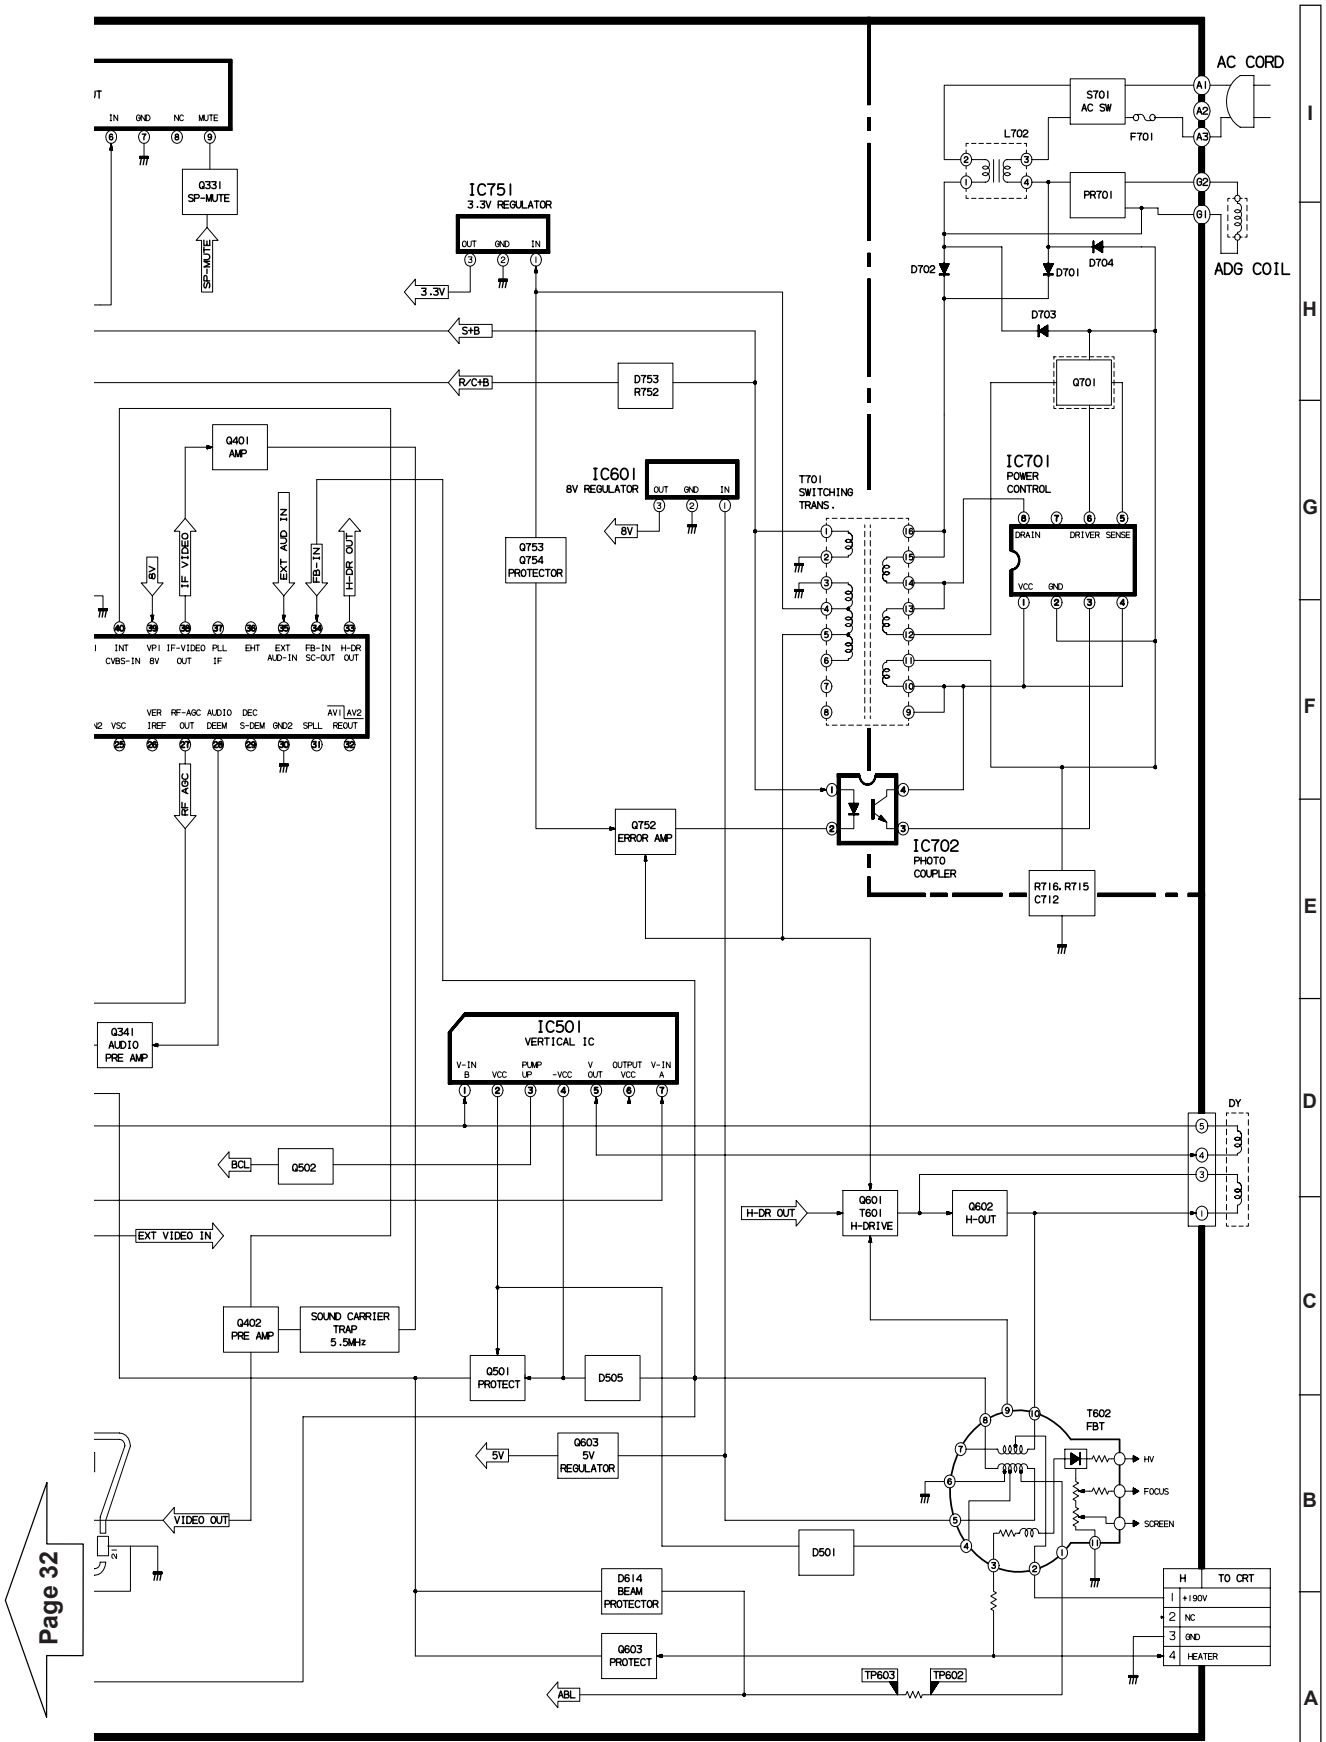

Page 32

CRT Unit

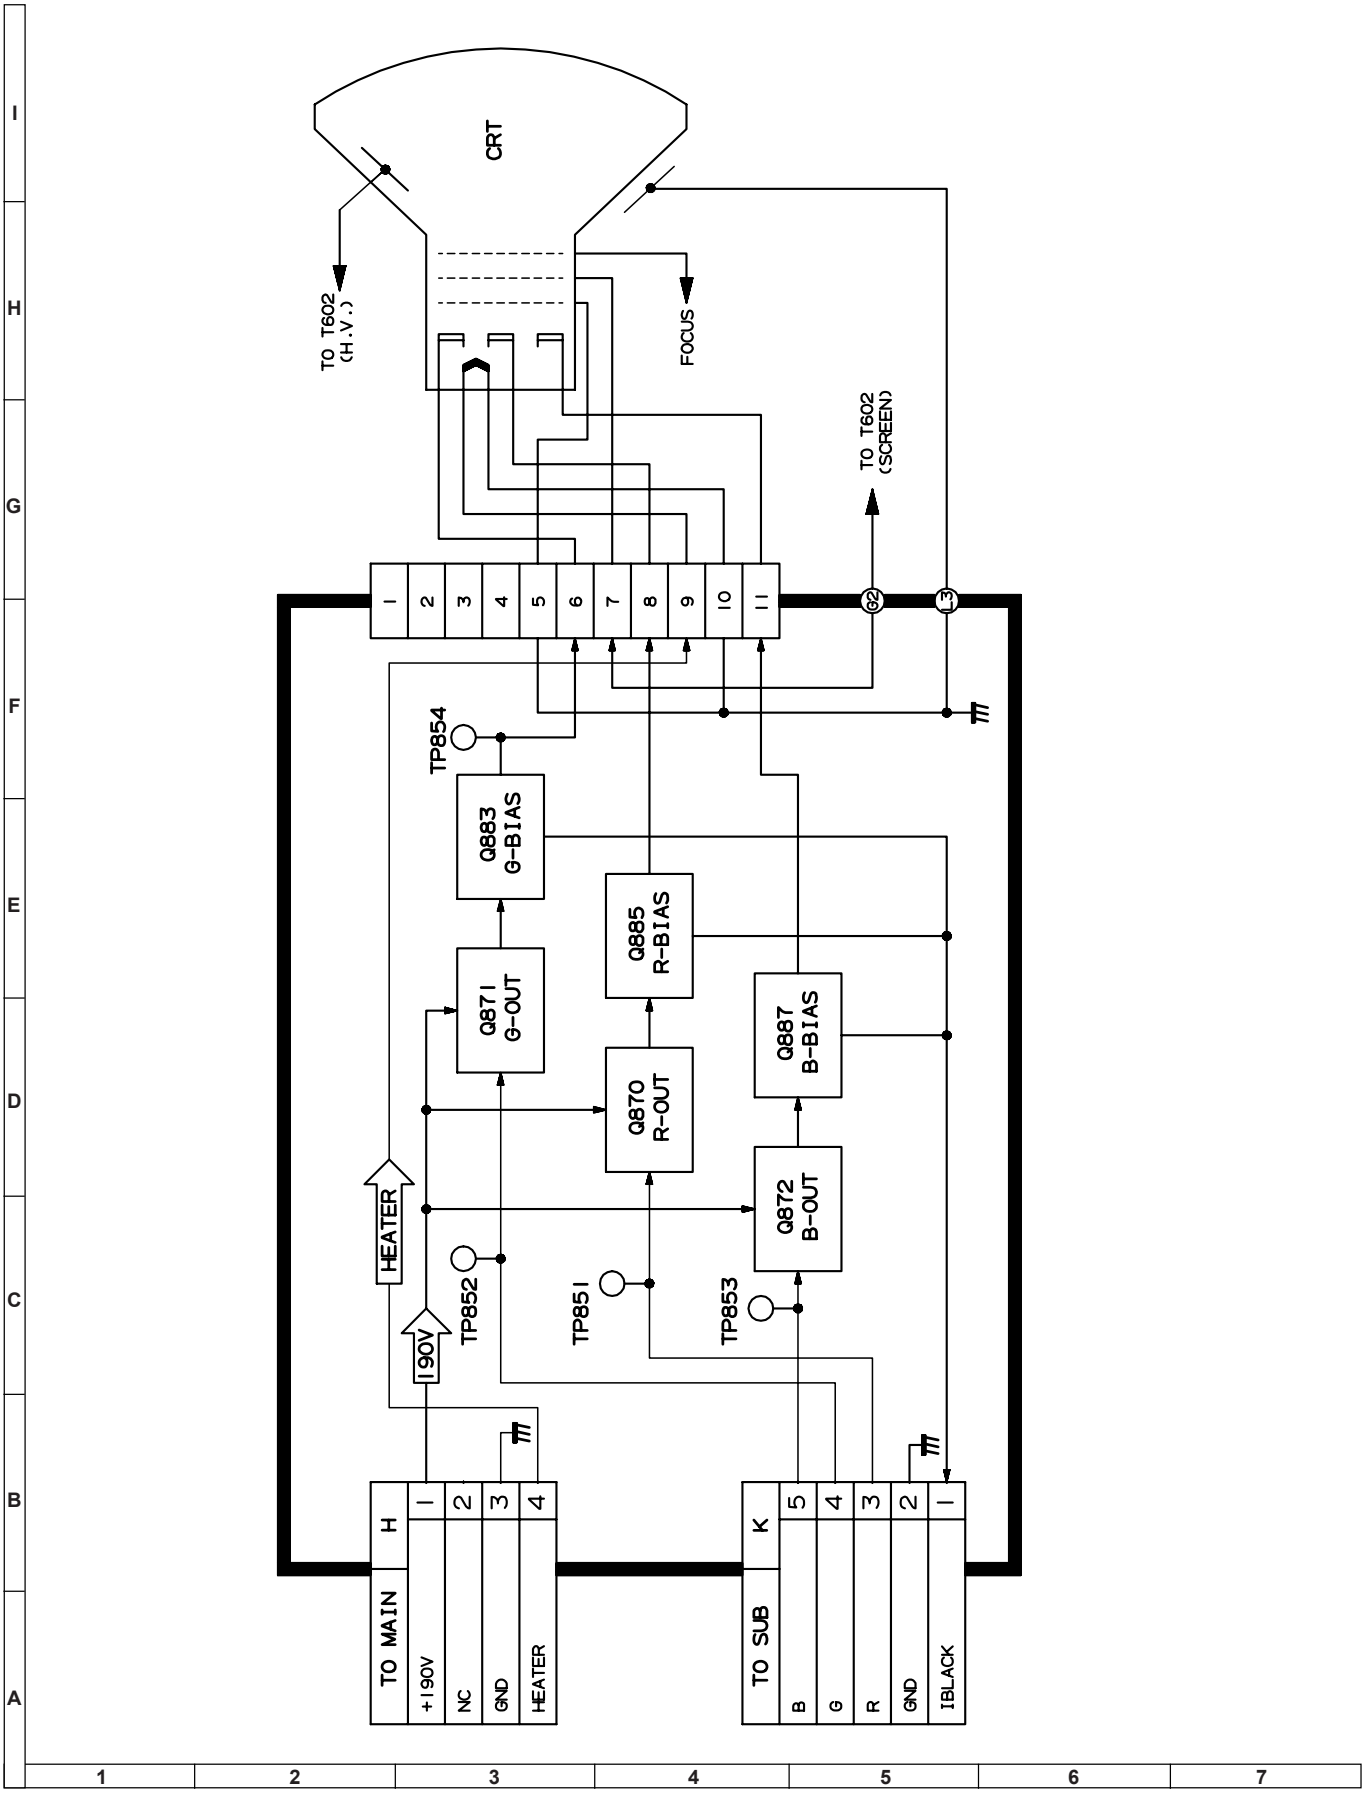
CRT
TO T602 (H.V.)
FOCUS
TO T602 (SCREEN)
1 2 3 4 5 6 7 8 9 10 11
G2
G3
TP854
Q883 G-BIAS
Q885 R-BIAS
Q887 B-BIAS
Q871 G-OUT
Q870 R-OUT
Q872 B-OUT
HEATER
190V
TP852
TP851
TP853
TO MAIN
H
1 2 3 4
+190V
NC
GND
HEATER
TO SUB
K
5 4 3 2 1
B
G
R
GND
IBLACK

TROUBLESHOOTING TABLES

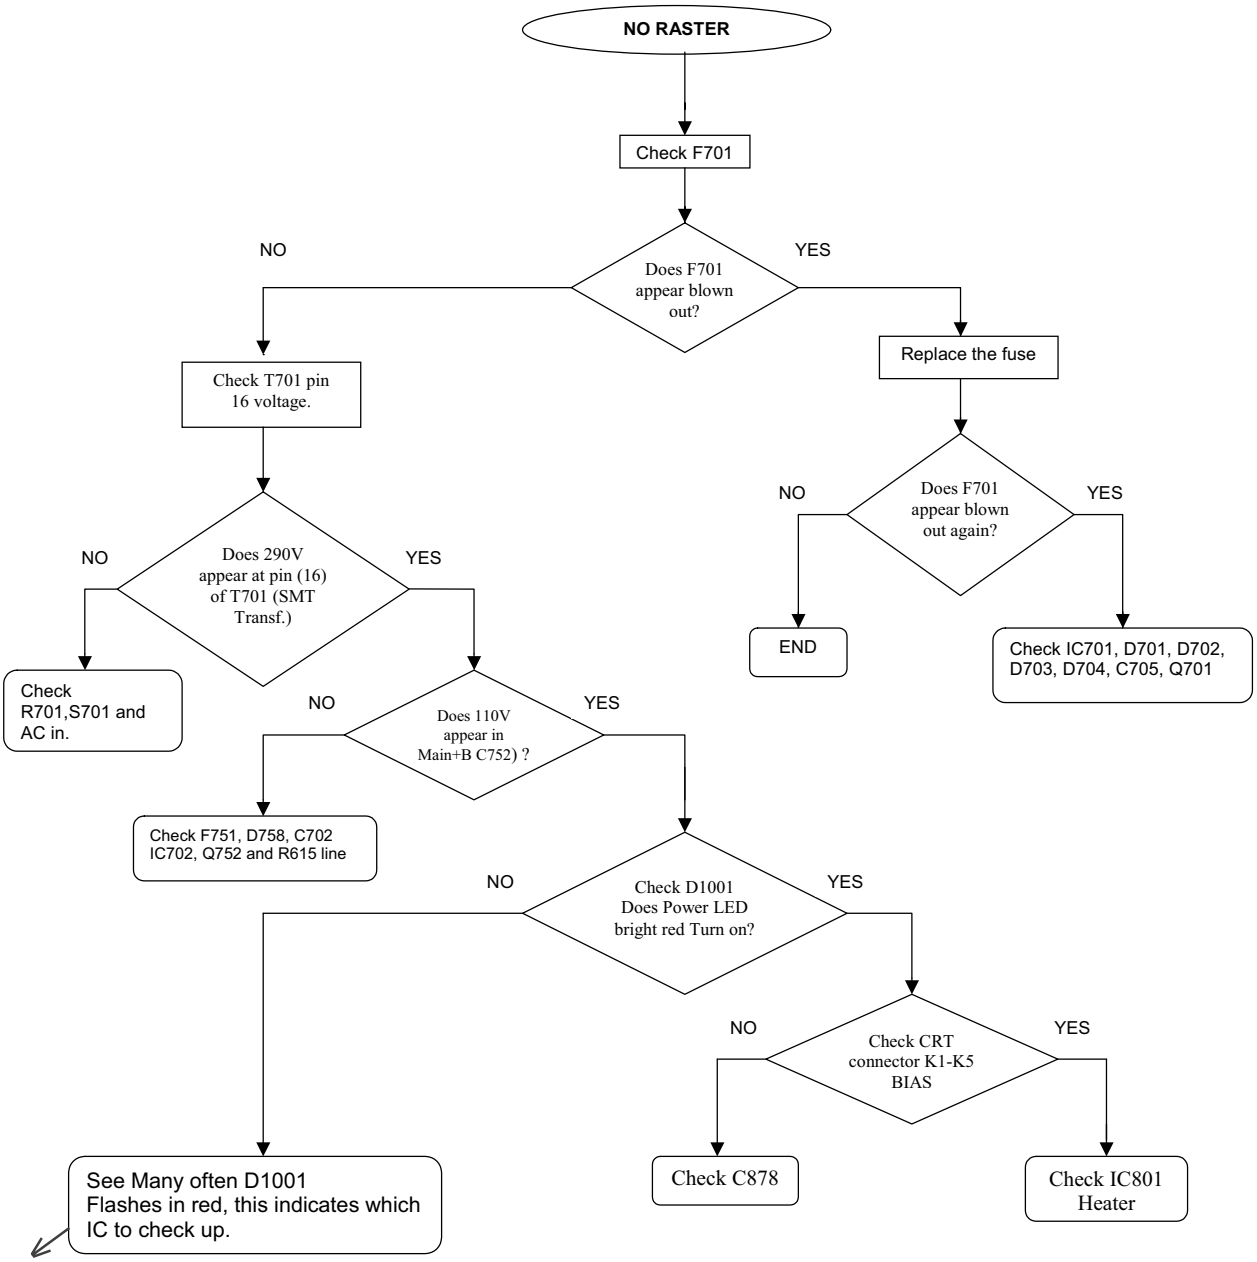

Explanation:

NVM
(IC1002)

2 Times Flash

TV Processor
(IC801)

3 Times Flash

TUNER
(TU201)

6 Times Flash

Power LED dark red

Protector Circuit

(R1028,D615,D612,D509,D510,D614,D604,D605,Q603)

NEITHER VERTICAL NOR HORIZONTAL SYNCHRONIZATION

CIRCUIT TO BE CHECKED:
Sync. Separator Circuit.

Check pin33 and 34 of IC801.

DEFECTIVE VERTICEL AMP. AND VERTICAL LINEARITY

Readjusted vertical size. (Bass Data)

Vertical linearity and size is abnormal.

Check R502,R505

NO VERTICAL SCAN

Check IC501 bias.

Normal

Check C502 and C514.

Abnormal

Check IC501.

NO SPECIFIC COLOUR

Is some colour produced in B/W broadcast reception?

NO

Check IC801,R801,R802, R803,D804,D805,D806 and Q801.

YES

Is the white balance properly adjusted?

NO

Readjusted the white balance.

YES

The picture colour is cyan.

Check Q870,Q885 and their adjacent circuits.

The picture colour is magenta.

Check Q871,Q883 and their adjacent circuits.

The picture colour is yellow.

Check Q872,Q887 and their adjacent circuits.

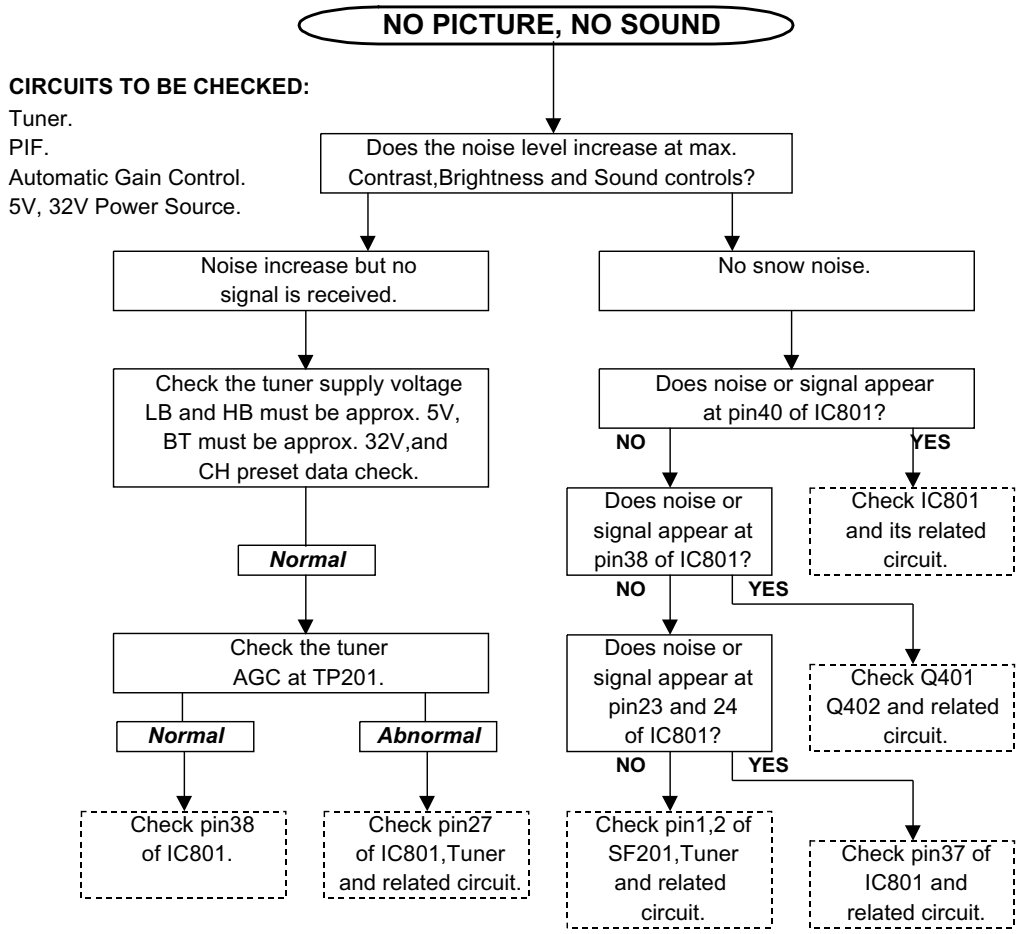
NO PICTURE, NO SOUND
CIRCUITS TO BE CHECKED:
Tuner.
PIF.
Automatic Gain Control.
5V, 32V Power Source.
Does the noise level increase at max. Contrast,Brightness and Sound controls?
Noise increase but no signal is received.
No snow noise.
Check the tuner supply voltage LB and HB must be approx. 5V, BT must be approx. 32V,and CH preset data check.
Does noise or signal appear at pin40 of IC801?
NO
YES
Normal
Does noise or signal appear at pin38 of IC801?
Check IC801 and its related circuit.
NO
YES
Check the tuner AGC at TP201.
Does noise or signal appear at pin23 and 24 of IC801?
Check Q401 Q402 and related circuit.
Normal
Abnormal
NO
YES
Check pin38 of IC801.
Check pin27 of IC801,Tuner and related circuit.
Check pin1,2 of SF201,Tuner and related circuit.
Check pin37 of IC801 and related circuit.

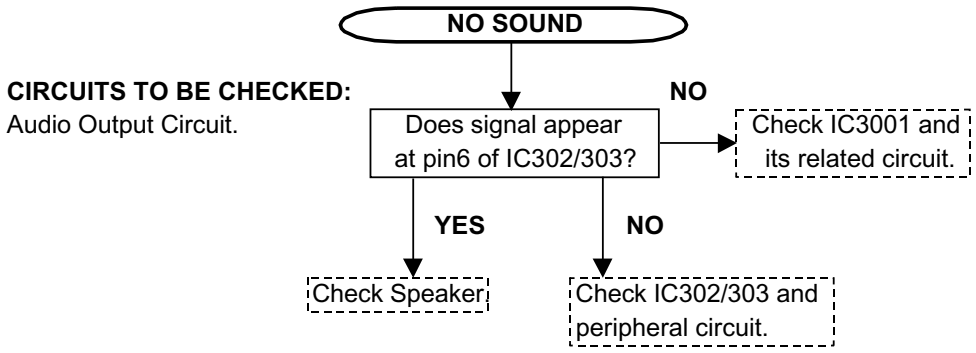
NO SOUND
CIRCUITS TO BE CHECKED:
Audio Output Circuit.
Does signal appear at pin6 of IC302/303?
NO
Check IC3001 and its related circuit.
YES
NO
Check Speaker
Check IC302/303 and peripheral circuit.

PARTS LISTING

REPLACEMENT PARTS

Replacement parts which have special safety characteristics are identified in this manual. Electrical components having such features are identified by ⚠ in the Replacement Part List.
The use of a substitute replacement part which does not have the same safety characteristics as the factory recommended is not permitted.
Replacement parts not shown in this service manual may create shock fire, or other hazards.

HOW TO ORDER REPLACEMENT PARTS

To have your order completed promptly and correctly please supply the following information.

1. MODEL NUMBER
2. REF. NO.
3. PART NO.
4. DESCRIPTION
5. CODE
6. QUANTITY

MARK *: SPARE PARTS DELIVERY SECTION

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
			PICTURE TUBE			
⚠		VB51EFS83912E	CRT 21" THA51EFS83X391+DYW	S	BN	CD
			MISCELLANEOUS PARTS			
⚠		RCILG0408BMZZ	DEGUSSING COIL	S	AH	AP
		LHLDC3009CEFN	ADG COIL HOLDER	S	AA	AB
		LHLDC3500BMFW	HOLDER	S	AA	AB
		LHLDW1514BM00	HOLDER UNEX 2233	S	AA	AA
		QEARC0009BMZZ	C.EARTH ELECTROMONTAJES	S	AB	AF
			PRINTED WIRING BOARDS (Not replacement item)			
		DUNTK7340CJV9	ADJUST CHASSIS 21HT15C	S	BG	BY
		DUNTK7341BMV9	CRT UNIT 21HT15C	S	AK	AV
	PWB-A		**MOTHER UNIT**			
			TUNER			
	TU 0201	VTUCTF5511+++	TUNER THOMSON	S	AN	AZ
			INTEGRATED CIRCUITS			
	IC 0303	VHIAN7523++-1	IC AN7523 MATSUSHITA	S	AC	AH
	IC 0501	VHIAN5522++-1	IC AN5522 MATSUSHITA	S	AC	AG
	IC 0601	VHIKA7808AP-1	IC KIA7808API KOREA ELECTRONICS	S	AA	AE
	IC 0701	VHITEA1507/-1	IC TEA1507P/N1 PHILIPS	S	AC	AH
⚠	IC 0702	RH-FX0008GEZZ	P/COUPLER RANK-S SHARP	S	AA	AD
	IC 0751	VHITA48M033-1	IC TA48M033F(S) TOSHIBA	S	AB	AF
	IC 0801	RH-IX3560CEN1	IC TDA9351PS/N2 PHILIPS	S	AV	BG
	IC 1002	VHIM24C08W6-1	IC M24C08-WMN6T ST MICRO	S	AB	AF
			TRANSISTORS			
	Q 0331	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0341	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0342	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0351	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0352	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0401	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0402	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0451	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0501	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0502	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0601	VS2SC2482//-1	TRT 2SC2482 TOSHIBA	S	AA	AC
	Q 0602	VS2SD2586//1E	TRT 2SD2586 TOSHIBA	S	AC	AK
	Q 0603	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0604	VS2SC1815GW-1	TRT NPN 60V 150MA 400MW	S	AA	AA
	Q 0605	VS2SA1530ARS1	smt transistor	S	AA	AA
	Q 0631	VS2SA1530ARS1	smt transistor	S	AA	AA
	Q 0701	VSSTP4NC80Z1E	MOS FET STP4NC80ZFP TOMEN	S	AC	AH
	Q 0752	VS2SC1815GW-1	TRT NPN 60V 150MA 400MW	S	AA	AA
	Q 0753	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 0754	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 1005	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
	Q 1006	VS2SC3928AR-1	TRANSISTOR	S	AA	AA
			DIODES			

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	D 0201	RH-EX0676GEZZ	ZENER DIODE MTZJ33CT ROHM	S	AA	AA
	D 0303	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0351	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0451	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0452	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0453	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0454	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0456	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0457	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0501	RH-DX0131CEZZ	DIODE EU-1 SANKEN	S	AA	AB
	D 0502	RH-DX0441CEZZ	DIODE IN4002G23 GENERAL INSTRUMENT	S	AA	AB
	D 0503	RH-EX0684GEZZ	ZENER DIODE MTZJ39BT ROHM	S	AA	AA
	D 0504	RH-EX0684GEZZ	ZENER DIODE MTZJ39BT ROHM	S	AA	AA
	D 0505	RH-DX0131CEZZ	DIODE EU-1 SANKEN	S	AA	AB
	D 0507	RH-EX0603GEZZ	Z.DIODE MTZJ 3.9A	S	AA	AA
	D 0508	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0509	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0510	RH-EX0627GEZZ	ZENER DIODE MTZJ8.2BT ROHM	S	AA	AA
	D 0601	RH-DX0302CEZZ	DIODE UZA	S	AA	AB
	D 0602	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0603	RH-DX0131CEZZ	DIODE EU-1 SANKEN	S	AA	AB
	D 0604	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0605	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0606	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0607	RH-EX0653GEZZ	DIODE ZENER MTZJ18C ROHM	S	AA	AA
	D 0608	RH-DX0577BMZZ	DIODE 1N4935 ACPA	S	AB	AE
	D 0609	VHD1SS244//-1	SW DIODE 1SS244T-72	S	AA	AA
	D 0610	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0611	RH-EX0615GEZZ	ZENER DIODE 5.6V	S	AA	AA
	D 0612	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0614	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0615	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0631	RH-EX0627GEZZ	ZENER DIODE MTZJ8.2BT ROHM	S	AA	AA
	D 0632	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0701	RH-DX0571BMZZ	DIODE 1N4005 ACPA	S	AA	AA
	D 0702	RH-DX0571BMZZ	DIODE 1N4005 ACPA	S	AA	AA
	D 0703	RH-DX0571BMZZ	DIODE 1N4005 ACPA	S	AA	AA
	D 0704	RH-DX0571BMZZ	DIODE 1N4005 ACPA	S	AA	AA
	D 0705	VHD1SS244//-1	SW DIODE 1SS244T-72	S	AA	AA
	D 0708	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0709	RH-EX0656GEZZ	ZENER DIODE MTZJ20C ROHM	S	AA	AA
	D 0751	RH-DX0302CEZZ	DIODE UZA	S	AA	AB
	D 0752	RH-DX0064GEZZ	DIODE AK04V1 SANKEN	S	AA	AC
	D 0753	RH-EX0612GEZZ	ZENER DIODE MTZJ5.1BT ROHM	S	AA	AA
	D 0754	RH-DX0302CEZZ	DIODE UZA	S	AA	AB
	D 0755	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0756	RH-EX0615GEZZ	ZENER DIODE 5.6V	S	AA	AA
	D 0759	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0804	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0805	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0806	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 0807	RH-EX1399CEZZ	ZENER DIODE UDZSTE-179.1B WAKO ELECTRIC	S	AA	AB
	D 1001	RH-PX0013PEZZ	LED L-53ID-13.95L/F	S	AA	AB
			PACKAGED CIRCUITS			
	PR 0701	RMPTP0001BMZZ	PTC B59250-C1080-B70	S	AA	AD
	X 1001	RCRSB0300CEZZ	CRYSTAL HC-49/U-S 12000KHz-A1 MURATA	S	AB	AF
			COILS			
	L 0201	VP-DF270K0000	PEAK COIL 27UH 10%	S	AA	AB
	L 0204	VP-DF270K0000	PEAK COIL 27UH 10%	S	AA	AB
	L 0308	VP-CF3R3K0000	PEAK COIL 3.3UH 10%	S	AB	AB
	L 0351	VP-DF3R3K0000	PEAK COIL 3,3UH 10%	S	AB	AB
	L 0353	VP-DF3R3K0000	PEAK COIL 3,3UH 10%	S	AB	AB
	L 0354	VP-DF3R3K0000	PEAK COIL 3,3UH 10%	S	AB	AB
	L 0403	VP-XF120K0000	PEAK COIL 12UH 10% 1/8W	S	AA	AA
	L 0451	VP-DF3R3K0000	PEAK COIL 3,3UH 10%	S	AB	AB
	L 0602	RCILP0225CEZZ	COIL SL_A TOKYO	S	AA	AD
	L 0701	RCILF0111BMZZ	COIL HR-19043	S	AE	AL
	L 0801	VP-XF100K0000	PEAK COIL 10UH 10% 1/8W	S	AA	AA
	L 0802	VP-XF100K0000	PEAK COIL 10UH 10% 1/8W	S	AA	AA
	L 1002	VP-XF100K0000	PEAK COIL 10UH 10% 1/8W	S	AA	AA
	L 3030	VP-CF3R3K0000	PEAK COIL 3.3UH 10%	S	AB	AB
			CERAMIC FILTERS			

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	CF 0401	RFILC0168GEZZ	SIF TRAP 5.5/6.5MHZ (MRT)	S	AA	AE
	SF 0201	RFILC0291BMZZ	SAW FILTER K2955M SIEMENS	S	AH	AP
			TRANSFORMERS			
	T 0601	RTRNZ0026PEZZ	DRIVER TRANSFORMER	S	AB	AE
⚠	T 0602	RTRNF2053CEZZ	FBT BSC21-2643S SHENZHEN	S	AM	AY
⚠	T 0701	RTRNW0005CEZZ	TRANSF. SMT 130010012 TABUCHI	S	AE	AP
			CAPACITORS			
	C 0201	VCEA0A1CW476M	ELEC C 47UF 20% 16V	S	AA	AA
	C 0202	VCEA0A1AW107M	ELEC C 100UF 20% 10V	S	AA	AA
	C 0204	VCEA0A1HW106M	ELEC C 10UF 20% 50V	S	AA	AA
	C 0206	VCKYCY1HF223Z	SC CAPACITOR 0.022UF 50V TAPED	S	AA	AA
	C 0207	VCKYCY1HB472K	S.CHIP CAP 4700PF/50V T	S	AA	AA
	C 0208	VCKYCY1HB821K	GRM39B 821K 50 (1608)SMD CAPACITOR	S	AA	AA
	C 0209	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 0210	VCCCCY1HH220J	S. CHIP CAP 22PF/50V TAPED	S	AA	AA
	C 0211	VCKYPA1HF103Z	C.CAPACITOR 0.01U-F 50V	S	AA	AA
	C 0212	VCKYPA1HF103Z	C.CAPACITOR 0.01U-F 50V	S	AA	AA
	C 0215	VCCCCY1HH220J	S. CHIP CAP 22PF/50V TAPED	S	AA	AA
	C 0302	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0305	VCEA0A1EW337M	ELEC C 330UF 20% 25V	S	AA	AB
	C 0307	VCEA0A1CW226M	ELEC C 22UF 20% 16V	S	AA	AA
	C 0308	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0311	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0320	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0322	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0324	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0328	VCCCCY1HH221J	S. CHIP CAP 220PF/50V TAPED	S	AA	AA
	C 0331	VCEA0A1HW225M	ELEC C 2,2UF 20% 50V	S	AA	AA
	C 0341	VCKYCY1HB332K	s.chip cap 3300pf /50v	S	AA	AA
	C 0342	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0343	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0345	VCKYCY1HB222K	S CHIP CAPACITOR 0.0022UF/50V TAPED	S	AA	AA
	C 0346	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0348	VCEA0A1HW105M	ELEC C 1UF 20% 50V	S	AA	AA
	C 0349	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0351	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0352	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
	C 0354	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
	C 0358	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0359	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0361	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0362	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0363	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0402	VCCCCY1HH220J	S. CHIP CAP 22PF/50V TAPED	S	AA	AA
	C 0403	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0404	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0431	VCKYCY1HF223Z	SC CAPACITOR 0.022UF 50V TAPED	S	AA	AA
	C 0432	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0433	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 0451	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0453	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0502	VCEA0A1EW477M	ELEC C 470UF 20% 25V	S	AA	AB
	C 0504	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0505	VCEA0A1HW107M	ELEC C 100UF 20% 50V	S	AA	AA
	C 0506	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0507	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0508	RC-FZ0272CEZZ	C POL P 0,39UF 100V	S	AA	AC
	C 0509	VCQYTA2AA563J	POL FILM C 56NF 5% 100V	S	AA	AB
	C 0511	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0512	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0513	VCKYPA2HB102K	CERAM C 1NF 10% 500V	S	AA	AA
	C 0514	VCEA0A1EW477M	ELEC C 470UF 20% 25V	S	AA	AB
	C 0515	VCQYTA1HM103J	F. CAPACITOR 0.01UF/50V	S	AA	AA
	C 0521	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0522	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0531	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0532	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0533	VCQYTA1HM104J	F. CAPACITOR 0.1 UF 50 V	S	AA	AA
	C 0599	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0602	VCEA0A1CW477M	ELEC C 470UF 20% 16V	S	AA	AA
	C 0603	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
	C 0604	VCKYPA1HF103Z	C.CAPACITOR 0.01U-F 50V	S	AA	AA

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	C 0605	VCEA0A1AW227M	ELEC C 220UF 20% 10V	S	AA	AA
	C 0606	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
	C 0607	VCKYPA1HF103Z	C.CAPACITOR 0.01U-F 50V	S	AA	AA
	C 0608	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 0609	VCKYPA2HB102K	CERAM C 1NF 10% 500V	S	AA	AA
	C 0610	VCFYSB2EB823J	POL FILM C 82NF 5% 100V	S	AA	AB
	C 0611	VCFPVC3CA912H	PP FILM C 9,1NF 3% 1600V	S	AA	AC
	C 0614	VCFPVC2DB564J	PP FILM C 560NF 5% 200V	S	AA	AD
	C 0615	RC-EZ0724CEZZ	ELEC C 100UF 160V KMF160VB-100MMC NICHIC	S	AB	AE
	C 0616	VCQYTA1HM104J	F. CAPACITOR 0.1 UF 50 V	S	AA	AA
	C 0617	VCEA0A1HW105M	ELEC C 1UF 20% 50V	S	AA	AA
	C 0619	VCEA0A1HW106M	ELEC C 10UF 20% 50V	S	AA	AA
	C 0621	VCEA0A2CW105M	ELEC C 1UF 20% 160V	S	AA	AA
	C 0622	VCEA0A1CW227M	E CAPACITOR 220UF 16V 6.3x11	S	AA	AB
	C 0631	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 0632	VCKYCY1HB222K	S CHIP CAPACITOR 0.0022UF/50V TAPED	S	AA	AA
	C 0633	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
⚠	C 0701	RC-FZ0176BMZZ	POL C B81130 100NF 275V X2	S	AA	AB
	C 0702	RC-KZ0029CEZZ	CERAM C 10NF 80,20% 250V	S	AC	AC
	C 0703	RC-KZ0029CEZZ	CERAM C 10NF 80,20% 250V	S	AC	AC
	C 0704	RC-KZ0029CEZZ	CERAM C 10NF 80,20% 250V	S	AC	AC
	C 0705	RC-EZ0150BMZZ	ELEC C 100uF 400V LPN100M2GN JAMICON	S	AD	AL
	C 0707	VCEA0A1EW107M	E. CAPACITOR 100UF 25V 6.3x11	S	AA	AA
	C 0708	VCQYTA1HM104J	F. CAPACITOR 0.1 UF 50 V	S	AA	AA
	C 0709	VCFYFA1HA474J	FILM CAPACITOR 474 MAT	S	AA	AB
	C 0710	RC-KZ0040CEZZ	CERAM C 820PF 2KV	S	AD	AD
⚠	C 0712	RC-KZ0105GEZZ	C. CAP 2200PF/4KV-KX	S	AA	AB
	C 0713	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0716	VCKYPA2HB102K	CERAM C 1NF 10% 500V	S	AA	AA
	C 0751	RC-KZ0299CEZZ	CERAM C DE1105-979BN821K2K-A3 MURATA	S	AA	AB
	C 0752	RC-EZ0724CEZZ	ELEC C 100UF 160V KMF160VB-100MMC NICHIC	S	AB	AE
	C 0753	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0754	VCEA0A1CW108M	ELEC C 1000MF 16V 10X16MM	S	AA	AB
	C 0755	VCEA0A1CW227M	E CAPACITOR 220UF 16V 6.3x11	S	AA	AB
	C 0756	VCEA0A0JW227M	E CAPACITOR 220UF/6.3V-5X11	S	AA	AA
	C 0757	VCKYPA2HB102K	CERAM C 1NF 10% 500V	S	AA	AA
	C 0758	VCEA0A1EW477M	ELEC C 470UF 20% 25V	S	AA	AB
	C 0759	VCKYPA1HB102K	C.CAPACITOR 1000PF/50V	S	AA	AA
	C 0761	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 0762	VCCCPA1HH680J	CERAM C 68PF 5% 50V	S	AA	AA
	C 0764	VCEA0A1EW107M	E. CAPACITOR 100UF 25V 6.3x11	S	AA	AA
	C 0765	VCEA0A1CW107M	ELEC C 100UF 20% 16V	S	AA	AA
	C 0767	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0801	VCEA0A1CW227M	E CAPACITOR 220UF 16V 6.3x11	S	AA	AB
	C 0803	VCFYFA1HA224J	PP FILM C 220NF 5% 50V	S	AA	AA
	C 0804	VCFYFA1HA224J	PP FILM C 220NF 5% 50V	S	AA	AA
	C 0805	VCKYCY1HB222K	S CHIP CAPACITOR 0.0022UF/50V TAPED	S	AA	AA
	C 0806	VCEA0A1HW105M	ELEC C 1UF 20% 50V	S	AA	AA
	C 0807	VCKYCY1HB472K	S.CHIP CAP 4700PF/50V T	S	AA	AA
	C 0808	VCKYCY1HF223Z	SC CAPACITOR 0.022UF 50V TAPED	S	AA	AA
	C 0809	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 0810	VCEA0A1HW474M	ELEC C 0,47UF 20% 50V	S	AA	AA
	C 0811	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0812	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0813	VCKYCY1HB102K	S. CHIP CAP 0.001UF/50V	S	AA	AA
	C 0814	VCKYCY1HB561K	S. CAPACITOR 560PF/50V	S	AA	AA
	C 0815	VCEA0A1CW227M	E CAPACITOR 220UF 16V 6.3x11	S	AA	AB
	C 0817	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0818	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0819	VCEA0A1CW227M	E CAPACITOR 220UF 16V 6.3x11	S	AA	AB
	C 0822	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 0823	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 1001	VCCCCY1HH330J	S. CHIP CAP 33PF/50V	S	AA	AA
	C 1002	VCCCCY1HH330J	S. CHIP CAP 33PF/50V	S	AA	AA
	C 1006	VCKYCY1HF223Z	SC CAPACITOR 0.022UF 50V TAPED	S	AA	AA
	C 1009	VCEA0A0JW107M	ELEC C 100UF 20% 6,3V	S	AA	AA
	C 1011	VCEA0A0JW107M	ELEC C 100UF 20% 6,3V	S	AA	AA
	C 1012	VCKYCY1EF104Z	S CHIP TAPE CAP 0.1UF/25V	S	AA	AA
	C 1013	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 1014	VCEA0A0JW107M	ELEC C 100UF 20% 6,3V	S	AA	AA
	C 1015	VCEA0A1CW106M	ELEC C 10UF 20% 16V	S	AA	AA
	C 1017	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA
	C 1018	VCKYCY1HF103Z	CHIP CAP 0.01UF/50V	S	AA	AA

REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
		RESISTORS			
R 0201	VRD-RA2BE332J	RES 3,3KOHM 5% 1/8W	S	AA	AA
R 0202	VRS-CY1JF681J	S. CHIP RES. 680-OHM TAPED	S	AA	AA
R 0208	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
R 0209	VRS-CY1JF391J	SURFACE MOUNT CHIP RESISTOR 390 OHM	S	AA	AA
R 0290	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
R 0302	VRS-CY1JF472J	S. RES. 4.7K OHM TAPED	S	AA	AA
R 0303	VRD-RA2BE331J	RES 330 OHM 5% 1/8W	S	AA	AA
R 0306	VRS-CY1JF392J	S. CHIP RES. 3.9K-OHM TAPED	S	AA	AA
R 0310	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
R 0312	VRS-CY1JF153J	S CHIP RES. 15K-OHM TAPED	S	AA	AA
R 0313	VRS-CY1JF223J	S.CHOP REG 22K-OHM T	S	AA	AA
R 0331	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
R 0332	VRS-CY1JF473J	S. CHIP RES 47K-OHM TAPED	S	AA	AA
R 0333	VRD-RA2BE103J	RES 10KOHM 5% 1/8W	S	AA	AA
R 0339	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
R 0340	VRS-CY1JF821J	S. CHIP RES. 820-OHM	S	AA	AA
R 0341	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
R 0342	VRS-CY1JF821J	S. CHIP RES. 820-OHM	S	AA	AA
R 0343	VRS-CY1JF471J	S. CHIP RES. 470-OHM TAPED	S	AA	AA
R 0344	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
R 0345	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
R 0351	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
R 0352	VRS-CY1JF104J	S. CHIP RES. 100K-OHM TAPED	S	AA	AA
R 0356	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
R 0357	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
R 0359	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
R 0360	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
R 0362	VRS-CY1JF472J	S. RES. 4.7K OHM TAPED	S	AA	AA
R 0363	VRS-CY1JF104J	S. CHIP RES. 100K-OHM TAPED	S	AA	AA
R 0364	VRS-CY1JF472J	S. RES. 4.7K OHM TAPED	S	AA	AA
R 0365	VRS-CY1JF104J	S. CHIP RES. 100K-OHM TAPED	S	AA	AA
R 0366	VRS-CY1JF561J	S. CHIP RES 560-OHM TAPED	S	AA	AA
R 0367	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
R 0390	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
R 0391	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
R 0401	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
R 0403	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
R 0405	VRS-CY1JF181J	S CHIP RES. 180-OHM TAPED	S	AA	AA
R 0406	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
R 0407	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
R 0408	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
R 0409	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
R 0451	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
R 0452	VRS-CY1JF104J	S. CHIP RES. 100K-OHM TAPED	S	AA	AA
R 0453	VRS-CY1JF223J	S.CHOP REG 22K-OHM T	S	AA	AA
R 0454	VRS-CY1JF562J	S. CHIP RES. 5.6K-OHM TAPED	S	AA	AA
R 0455	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
R 0456	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
R 0457	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
R 0458	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
R 0459	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
R 0460	VRD-RA2EE750J	RES 75 OHM 5% 1/4W	S	AA	AA
R 0461	VRD-RA2BE224J	RES 220KOHM 5% 1/8W	S	AA	AA
R 0490	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
R 0491	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
R 0492	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
R 0501	VRD-RA2BE392J	RES 3,9KOHM 5% 1/8W	S	AA	AA
R 0502	VRN-VV3DB2R7J	MET FILM R 2,7 OHM 5% 2W	S	AA	AB
R 0503	VRD-RA2HD331J	RES 330 OHM 5% 1/2W	S	AA	AA
R 0504	VRS-CY1JF181J	S CHIP RES. 180-OHM TAPED	S	AA	AA
R 0505	VRD-RA2BE1R0J	RES 1 OHM 5% 1/8W	S	AA	AA
R 0507	VRS-CY1JF181J	S CHIP RES. 180-OHM TAPED	S	AA	AA
R 0509	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
R 0511	VRD-RA2HD102J	RES 1KOHM 5% 1/2W	S	AA	AA
R 0512	VRD-RA2BE100J	RES 10 OHM 5% 1/8W	S	AA	AA
R 0513	VRD-RA2BE103J	RES 10KOHM 5% 1/8W	S	AA	AA
R 0514	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
R 0515	VRS-CY1JF153J	S CHIP RES. 15K-OHM TAPED	S	AA	AA
R 0516	VRS-CY1JF153J	S CHIP RES. 15K-OHM TAPED	S	AA	AA
R 0517	VRS-CY1JF223J	S.CHOP REG 22K-OHM T	S	AA	AA
R 0518	VRS-CY1JF334J	S. CHIP RES. 330K-OHM TAPED	S	AA	AA
R 0531	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA

REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
R 0532	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
R 0533	VRD-RA2BE393J	RES 39KOHM 5% 1/8W	S	AA	AA
R 0603	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
R 0604	VRD-RA2HD472J	RES 4.7KOHM 5% 1/2W	S	AA	AA
R 0605	VRS-KT3LB332J	MET OX RES 3,3KOHM 5% 3W	S	AA	AD
R 0606	VRD-RA2HD102J	RES 1KOHM 5% 1/2W	S	AA	AA
R 0607	VRD-RA2BE104J	RES 100KOHM 5% 1/8W	S	AA	AA
R 0608	VRN-RV3ABR82J	MET FILM R 0,82 OHM 5% 1W	S	AA	AB
R 0609	VRD-RA2HD101J	RES 100 OHM 5% 1/2W	S	AA	AA
R 0610	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
R 0611	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
R 0612	VRD-RA2BE331J	RES 330 OHM 5% 1/8W	S	AA	AA
R 0613	VRD-RA2HD184J	RES 180KOHM 5% 1/2W	S	AA	AA
R 0614	VRD-RA2HD472J	RES 4.7KOHM 5% 1/2W	S	AA	AA
R 0615	VRD-RA2HD472J	RES 4.7KOHM 5% 1/2W	S	AA	AA
R 0616	VRD-RA2HD182J	RES 1,8KOHM 5% 1/2W	S	AA	AA
R 0618	VRD-RA2BE123J	RES 12KOHM 5% 1/8W	S	AA	AA
R 0619	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
R 0620	VRD-RA2HD220J	RES 22 OHM 5% 1/2W	S	AA	AA
R 0621	VRD-RA2HD820J	RES 82 OHM 5% 1/2W	S	AA	AA
⚠ R 0623	VRG-RL2HB562J	FUS RES 5,6KOHM 5% 1/2W	S	AA	AB
R 0624	VRD-RA2BE123J	RES 12KOHM 5% 1/8W	S	AA	AA
R 0625	VRD-RA2BE103J	RES 10KOHM 5% 1/8W	S	AA	AA
R 0626	VRS-CY1JF562J	S. CHIP RES. 5.6K-OHM TAPED	S	AA	AA
R 0627	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
R 0629	VRD-RA2EE151J	RES 150 OHM 5% 1/4W	S	AA	AA
R 0630	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
R 0631	VRD-RA2BE391J	RES 390 OHM 5% 1/8W	S	AA	AA
R 0632	VRD-RA2BE273J	RES 27KOHM 5% 1/8W	S	AA	AA
R 0633	VRS-CY1JF822J	S. CHIP RES. 8.2K-OHM TAPED	S	AA	AA
R 0634	VRS-CY1JF102J	S.CHIP RES TAPE 1K OHM	S	AA	AA
R 0636	VRS-CY1JF154J	S CHIP RES. 150K-OHM TAPED	S	AA	AA
R 0637	VRS-CY1JF333J	S. CHIP RES. 33K-OHM TAPED	S	AA	AA
R 0638	VRS-CY1JF221J	S. CHIP RES. 220-OHM TAPED	S	AA	AA
R 0639	VRD-RA2BE333J	RES 33KOHM 5% 1/8W	S	AA	AA
R 0640	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
R 0701	VRW-KP3HC5R6K	WOUND RES 5,6 OHM 10% 5W	S	AB	AC
R 0706	VRD-RA2BE122J	RES 1,2KOHM 5% 1/8W	S	AA	AA
R 0707	VRD-RA2BE393J	RES 39KOHM 5% 1/8W	S	AA	AA
R 0708	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
R 0710	VRN-VV3ABR27J	MET FILM R .27 OHM 5% 1W	S	AA	AA
R 0711	VRD-RA2BE270J	RES 27 OHM 5% 1/8W	S	AA	AA
R 0712	VRD-RA2HD100J	RES 10 OHM 5% 1/2W	S	AA	AA
R 0713	VRD-RA2BE394J	RES 390KOHM 5% 1/8W	S	AA	AA
⚠ R 0716	RR-HZ0014GEZZ	high vol. resistor 12m ohm	S	AA	AC
R 0718	VRD-RA2BE824J	RES 820KOHM 5% 1/8W	S	AA	AA
R 0752	VRD-RA2HD102J	RES 1KOHM 5% 1/2W	S	AA	AA
R 0753	VRN-VV3DB5R6J	MET FILM R 5.6 OHM 5% 2W	S	AA	AA
R 0761	VRD-RA2BE152J	RES 1,5KOHM 5% 1/8W	S	AA	AA
R 0762	VRD-RA2HD184J	RES 180KOHM 5% 1/2W	S	AA	AA
R 0763	VRD-RA2BE822J	RES 8,2KOHM 5% 1/8W	S	AA	AA
R 0766	VRD-RA2EE183J	RES 18KOHM 5% 1/4W	S	AA	AA
R 0768	VRD-RA2HD124J	RES 120KOHM 5% 1/2W	S	AA	AA
R 0770	VRD-RA2HD181J	RES 180 OHM 5% 1/2W	S	AA	AA
R 0771	VRD-RA2HD181J	RES 180 OHM 5% 1/2W	S	AA	AA
R 0772	VRS-CY1JF333J	S. CHIP RES. 33K-OHM TAPED	S	AA	AA
R 0773	VRS-CY1JF153J	S CHIP RES. 15K-OHM TAPED	S	AA	AA
R 0774	VRS-CY1JF332J	S. CHIP RES. 3.3K-OHM TAPED	S	AA	AA
R 0801	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
R 0802	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
R 0803	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
R 0804	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
R 0805	VRS-CY1JF223J	S.CHOP REG 22K-OHM T	S	AA	AA
R 0806	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
R 0807	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
R 0808	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
R 0809	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
R 1001	VRS-CY1JF181J	S CHIP RES. 180-OHM TAPED	S	AA	AA
R 1002	VRS-CY1JF221J	S. CHIP RES. 220-OHM TAPED	S	AA	AA
R 1003	VRS-CY1JF331J	S CHIP RES TAPE 330 OHM	S	AA	AA
R 1004	VRS-CY1JF681J	S. CHIP RES. 680-OHM TAPED	S	AA	AA
R 1005	VRS-CY1JF472J	S. RES. 4.7K OHM TAPED	S	AA	AA
R 1006	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
R 1008	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	R 1009	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 1014	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 1015	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 1016	VRD-RA2BE332J	RES 3,3KOHM 5% 1/8W	S	AA	AA
	R 1017	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 1018	VRD-RA2BE332J	RES 3,3KOHM 5% 1/8W	S	AA	AA
	R 1019	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1020	VRS-CY1JF153J	S CHIP RES. 15K-OHM TAPED	S	AA	AA
	R 1022	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1023	VRD-RA2BE153J	RES 15KOHM 5% 1/8W	S	AA	AA
	R 1024	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1025	VRS-CY1JF122J	S. RESISTOR 1.2K OHM	S	AA	AA
	R 1026	VRS-CY1JF224J	S. CHIP RES. 220K-OHM TAPED	S	AA	AA
	R 1027	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1028	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 1029	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1033	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1034	VRD-RA2BE332J	RES 3,3KOHM 5% 1/8W	S	AA	AA
	R 1035	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1036	VRD-RA2BE332J	RES 3,3KOHM 5% 1/8W	S	AA	AA
	R 1037	VRD-RA2BE101J	RES 100 OHM 5% 1/8W	S	AA	AA
	R 1038	VRS-CY1JF223J	S.CHOP REG 22K-OHM T	S	AA	AA
	R 1040	VRS-CY1JF152J	S. CHIP RES. 1.5K-OHM	S	AA	AA
	R 1041	VRS-CY1JF152J	S. CHIP RES. 1.5K-OHM	S	AA	AA
	R 1043	VRS-CY1JF562J	S. CHIP RES. 5.6K-OHM TAPED	S	AA	AA
	R 1044	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 1047	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 1048	VRS-CY1JF391J	SURFACE MOUNT CHIP RESISTOR 390 OHM	S	AA	AA
	R 1052	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 1053	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	R 1054	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
	R 1056	VRS-CY1JF103J	S.C. RESISTOR 10K OHM	S	AA	AA
	R 1057	VRS-CY1JF472J	S. RES. 4.7K OHM TAPED	S	AA	AA
	R 1058	VRS-CY1JF101J	S. CHIP RES. 100-OHM TAPED	S	AA	AA
			MISCELLANEOUS PARTS			
⚠	F 0701	QFS-C3229CEZZ	FUSE S506-3.15A-A1 TOKYO COMPONENTS	S	AA	AC
⚠	F 0751	QFS-J2521CEZZ	FUSE 2,5A 125V LITTELFUSE (KURODA9	S	AC	AD
	FB 0451	RBLN-0037CEZZ	BALUN FBA04HA90088-00 T/Y	S	AB	AB
	FB 0452	RBLN-0037CEZZ	BALUN FBA04HA90088-00 T/Y	S	AB	AB
	FB 0601	RBLN-0037CEZZ	BALUN FBA04HA90088-00 T/Y	S	AB	AB
	FB 0701	RBLN-0037CEZZ	BALUN FBA04HA90088-00 T/Y	S	AB	AB
	FH 0701	QFSHD1001BMZZ	FUSE HOLD.EYF52BC=PANASON	S	AA	AA
	FH 0702	QFSHD1002BMZZ	FUSE HOLD.EYF52BC=PANASON	S	AA	AA
	P 0301	QPLGN0241CEZZ	PLUG	S	AA	AA
	P 0601	QPLGN0441CEZZ	PLUG 4PIN	S	AA	AA
	P 0602	QPLGN0560CEZZ	CONNECTOR 5 PIN TV-50P-05-V2 A TAIKO	S	AA	AC
	P 0701	QPLGN0360CEZZ	CONNECTOR 3 PIN TV-50P-03-V2 A TAIKO	S	AA	AA
	P 0702	QPLGN0260CEZZ	CONNECTOR 2 PIN TV-50P-02-V2 A TAIKO	S	AA	AA
	P 0801	QPLGN0541CEZZ	PLUG	S	AA	AA
	P 1001	QPLGN0641CEZZ	PLUG	S	AA	AA
	RJ 0001	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0004	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0008	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0009	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0010	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0011	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0019	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0020	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0024	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0026	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0027	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0029	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0031	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0033	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0035	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0036	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0044	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0046	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0047	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0048	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0055	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0056	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0057	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
	RJ 0058	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0059	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0061	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0062	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0064	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0065	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0067	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0068	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0070	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0071	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0072	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0074	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0075	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0080	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RJ 0085	VRS-CY1JF000J	S. CHIP RES. 0-OHM TAPED	S	AA	AA
	RMC1001	RRMCU0235CEZZ	R/M RECEIVER TSOP1838UH1-A VISHAY	S	AC	AG
⚠	S 0701	QSW-P0591CEZZ	SWITCH SDDFC3-A ALPS	S	AD	AL
	S 1001	QSW-K0003AJZZ	SWITCH	S	AA	AA
	S 1002	QSW-K0003AJZZ	SWITCH	S	AA	AA
	S 1003	QSW-K0003AJZZ	SWITCH	S	AA	AA
	S 1004	QSW-K0003AJZZ	SWITCH	S	AA	AA
	S 1005	QSW-K0003AJZZ	SWITCH	S	AA	AA
	SC 0451	QSOCZ2107BMZZ	SOCKET	S	AF	AE
	VA 0701	RH-VX0047CEZZ	VARISTOR SIOV-S14K420M4 MATSUSHITA	S	AA	AC
	PWB-B		**CRT UNIT**			
			TRANSISTORS			
	Q 0870	VSBF422////-1	TRT BF422 PHILIPS	S	AA	AA
	Q 0871	VSBF422////-1	TRT BF422 PHILIPS	S	AA	AA
	Q 0872	VSBF422////-1	TRT BF422 PHILIPS	S	AA	AA
	Q 0883	VSBF421////-1	TRT BF421 PHILIPS	S	AA	AA
	Q 0885	VSBF421////-1	TRT BF421 PHILIPS	S	AA	AA
	Q 0887	VSBF421////-1	TRT BF421 PHILIPS	S	AA	AA
			DIODES			
	D 0811	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0812	RH-DX0045BMZZ	DIODE 1N4148	S	AA	AA
	D 0880	VHD1SS82///1A	DIODE 1SS82-A HITACHI	S	AA	AB
	D 0881	VHD1SS82///1A	DIODE 1SS82-A HITACHI	S	AA	AB
	D 0882	VHD1SS82///1A	DIODE 1SS82-A HITACHI	S	AA	AB
			CAPACITORS			
	C 0871	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
	C 0872	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
	C 0873	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
	C 0875	VCKYPA2HB102K	CERAM C 1NF 10% 500V	S	AA	AA
	C 0876	RC-KZ0150CEZZ	CERAM C DE0707-726E102Z3K-A MURATA	S	AA	AB
	C 0878	VCEAGA2EW336M	ELEC C 33UF 20% 250V	S	AA	AD
	C 0880	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
	C 0881	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
	C 0882	VCKYPA1HB471K	CERAM C 470PF 10% 50V	S	AA	AA
			RESISTORS			
	R 0879	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
	R 0880	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
	R 0881	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
	R 0882	VRS-VV3DB153J	MET OX RES 15KOHM 5% 2W	S	AA	AA
	R 0883	VRD-RA2HD272J	RES 2,7KOHM 5% 1/2W	S	AA	AA
	R 0884	VRS-VV3DB153J	MET OX RES 15KOHM 5% 2W	S	AA	AA
	R 0885	VRD-RA2HD272J	RES 2,7KOHM 5% 1/2W	S	AA	AA
	R 0886	VRS-VV3DB153J	MET OX RES 15KOHM 5% 2W	S	AA	AA
	R 0887	VRD-RA2HD272J	RES 2,7KOHM 5% 1/2W	S	AA	AA
	R 0892	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
	R 0893	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
	R 0894	VRD-RA2BE102J	RES 1KOHM 5% 1/8W	S	AA	AA
	R 0895	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
	R 0896	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
	R 0899	VRD-RA2BE471J	RES 470 OHM 5% 1/8W	S	AA	AA
			MISCELLANEOUS PARTS			
	P 0851	QPLGN0441CEZZ	PLUG 4PIN	S	AA	AA
	P 0882	QPLGN0541CEZZ	PLUG	S	AA	AA
	P 0883	QTIPM0017CEFM	TIP	S	AA	AA
⚠	SC 0882	QSOCV0016PEZZ	CRT SOCKET 1SHM07S-L_A_	S	AA	AE

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
			MISCELLANEOUS PARTS			
⚠		CACCZ2049WEV5	A.C CORD 14" 15" 20" 21"	S	AK	AR
		LHLDK1501BM00	HOLDER	S	AA	AB
		LHLDW1009CEZZ	HOLDER	S	AA	AA
		LHLDW1019CEZZ	HOLDER	S	AA	AB
		LHLDW1033CE00	HOLDER	S	AA	AA
		LHLDW1060CEZZ	HOLDER	S	AA	AA
		LHLDZ1714BMZZ	HOLDER ANODE CAP	S	AA	AA
		QCNW-5971CEZZ	WIRE (SP)	S	AA	AC
		RRMCG1060BMSA	R/C 37DT25S	S	AM	AU
		SPAKR500A2004	WRAPPER BOBINE	S	AE	AN
		UBATU0013TAZZ	BATTERY R6(X2) TOSHIBA	S	AB	AF
		QSOCN0302CEZZ	SOCKET SMK W-A5303-1N	S	AA	AB
		QTIPM0025TAZZ	PIN SMK W-T0512-11	S	AA	AA
		GCABA1352BMSA	FRONT CABINET	S	--	--
		LHLDZ1050CEZZ	HOLDER	S	AA	AB
		XTASD30P12000	SCREW	S	AA	AA
	SP 0301	VSP9050PB33WA	SPEAKER 509SF32C001MA MISAWA	S	AC	AK
		TINS-7185BMN0	OWNERS MANUAL 21HT15C	S	AG	AS
		TINS-7249BMN0	ERRATUIM SHET 21HT15/16C	S	AA	AA
		SPAKC5494BMZZ	PACKING CASE	S	AL	AX
		SPAKX4076BMZZ	CUSHION	S	AH	AU
		LHLDW1033CE00	HOLDER	S	AA	AA
		QCNW-5969CEZZ	WIRE (H)	S	AA	AC
		QCNW-5970CEZZ	WIRE (K)	S	AA	AD
			21HT15C / 21HT16C CABINET PARTS			
⚠	1	CCABA1352BMV0	CABINET SET 21HT15S	S	AT	BE
	1.1	HBDGB3508BMSB	SHARP BADGE	S	AC	AG
	1.2	HDECQ0069BMSA	DECORATION POWER	S	AA	AC
	1.3	JBTN-1082BMSA	UP/DOWN BUTTON	S	AA	AD
	1.4	JBTN-1081BMSA	POWER BUTTON	S	AA	AC
⚠	2	GCABB1129BMKA	REAR CABINET	S	AP	AZ
	3	XTASB40P20000	SCREW	S	AA	AA
			21HT15CS / 21HT16CS CABINET PARTS (SILVER)			
⚠	1	CCABA1368BMV0	CABINET SET 21HT15SDES	S	AT	BE
	1.1	HBDGB3508BMSB	SHARP BADGE	S	AC	AG
	1.2	HDECQ0069BMSA	DECORATION POWER	S	AA	AC
	1.3	JBTN-1082BMSB	BUTTON	S	AA	AD
	1.4	JBTN-1081BMSA	POWER BUTTON	S	AA	AC
⚠	2	GCABB1129BMKB	REAR CABINET	S	AP	AZ
	3	XTASB40P20000	SCREW	S	AA	AA

CRT ADAPTATION

In case the original Thomson CRT detailed at the beginning of Parts Listing was not available, it may be used the below Philips alternative (Info from SP022700X Technical Report, issuance Date: 16th Oct. 2002).

Here it can be found the Philips Parts Listings with just the involved parts.

Note: Have in mind to do the required picture adjustments according with this Service Manual, after replacing the CRT.

PARTS LISTING FOR PHILIPS CRT (Just differences regarding the Thomson one).

	REF No.	PARTS	DESCRIPTION	*	SN CODE	EX CODE
			PICTURE TUBE			
⚠		VB51EAL15511N	CRT 21" PHILIPS B/MATRIX	S	CF	CG
	PWB-A		**MOTHER UNIT**			
			CAPACITORS			
	C 0612	RC-KZ0036CEZZ	CERAM C 330PF 2KV	S	AA	AB
	C 0613	VCFPVC2DB564J	PP FILM C 560NF 5% 200V	S	AA	AD
			RESISTORS			
	R 0608	VRN-RV3AB2R2J	MET FILM R 2,2 OHM 5% 1W	S	AA	AB
			MISCELLANEOUS PARTS			
	(F)	CSOCN0460BMV4	SOCKET WITH WIRE	S	AB	AG

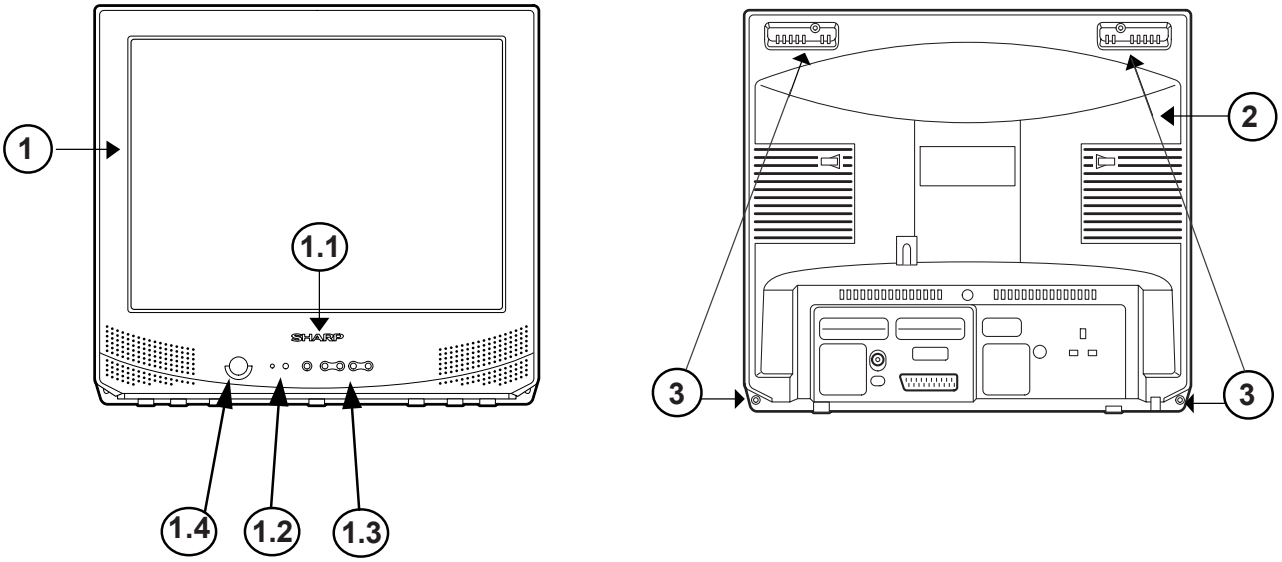

SOURCE OF DOCUMENTATION

1. **TDA9351**, Philips Data Sheet:
   TDA935X/6X/8X PS/N2 series, TV signal processor-Teletext decoder with embedded m-Controller. Tentative Device Specification, 2001 Apr 12, Version: 2.85.

2. **TEA1507**, Philips Data Sheet:
   TEA1507 GreenChipII SMPS controlIC. Preliminary specification, 2000Dec05.

3. **AN7523**, Matsushita Electronics Corporation Specifications:
   AN7523 Product Specifications. Doc No. SDSC-PSE-AN7503, Eff. Date 23-FEB-01.

4. **AN5522**, Matsushita Electronics Corporation Specifications:
   AN5522 Product Specifications. Doc No. SDSC-PSE-AN5522, Eff. Date 21-NOV-2000.

SHARP®

No part of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without prior written permission of the publisher.

SHARP ELECTRONICA ESPAÑA S.A.
TV Division
Engineering Dept.
Polígono Industrial Can Sant Joan
Sant Cugat del Vallès
Barcelona
Spain

PRINTED BY: ON:

Think Ecology, please use

RECYCLED PAPER

Other ManualsLib Projects

www.manualslib.com

www.manualslib.de

www.manualslib.es

www.manualslib.fr

www.manualslib.nl

www.manualslib.mx

www.manualslib.tech 30+ Languages